Raxiom 13.5 in. Double Row LED Light Bar (87-17 Wrangler YJ, TJ & JK) Installation Guide

Installation Time: 45 minutes – 1 Hour

Tools Required:

✓ Drill

✓ 5/16 Drill Bit

√ 9/16 Socket

Installation Instructions:

1. You will first want to take everything out of the packaging.



2. First put the screws that will go into the bumper, or whatever you will be bolting the feet to, into the feet. Then screw the feet onto the light bar. (I needed to place the feet inward rather than outward so it would fit on my bumper, thus I needed to purchase longer screws)



3. Place the light bar on the bumper and mark where the bolt holes must be screwed. Then screw into the bumper with a 5/16 drill bit so that the light bar can be bolted to the bumper.



4. Now place the rubber pieces on the feet of the light bar.



5. Place the light bar on the bumper, making sure the bolts go into the holes that you have just screwed.




6. Now place the lock nut and nut on the bolt that goes through the bumper.



7. Tighten the nut with a 9/16 socket.



8. The installation is complete.

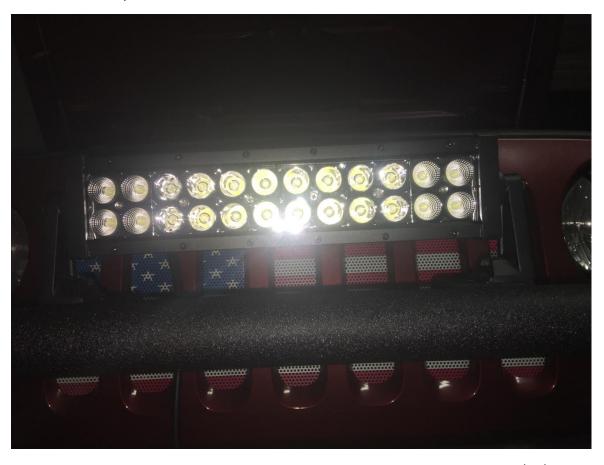

Installation Instructions Written by ExtremeTerrain Customer Thomas Sandoval 05/04/2017