

Synergy Front Grab Handle Set (97-06 Wrangler TJ)

Installation Time: 60 Minutes

Tools Required:

- ✓ T40 star bit
- ✓ 3/16 Allen

Installation Instructions:

1. Before



2. What comes with the Synergy Front Grab Handle Set (97-06 Wrangler TJ)



3. Start with removing the one T40 screw closest to the door opening.




4. Loosely attach the Synergy Front Grab Handle with the factory T40 screw.



5. Find the 3/16 Allen screw and machined block provided with the kit.



6. Attach the machined block to the Synergy Front Grab Handle using the 3/16 allen screw

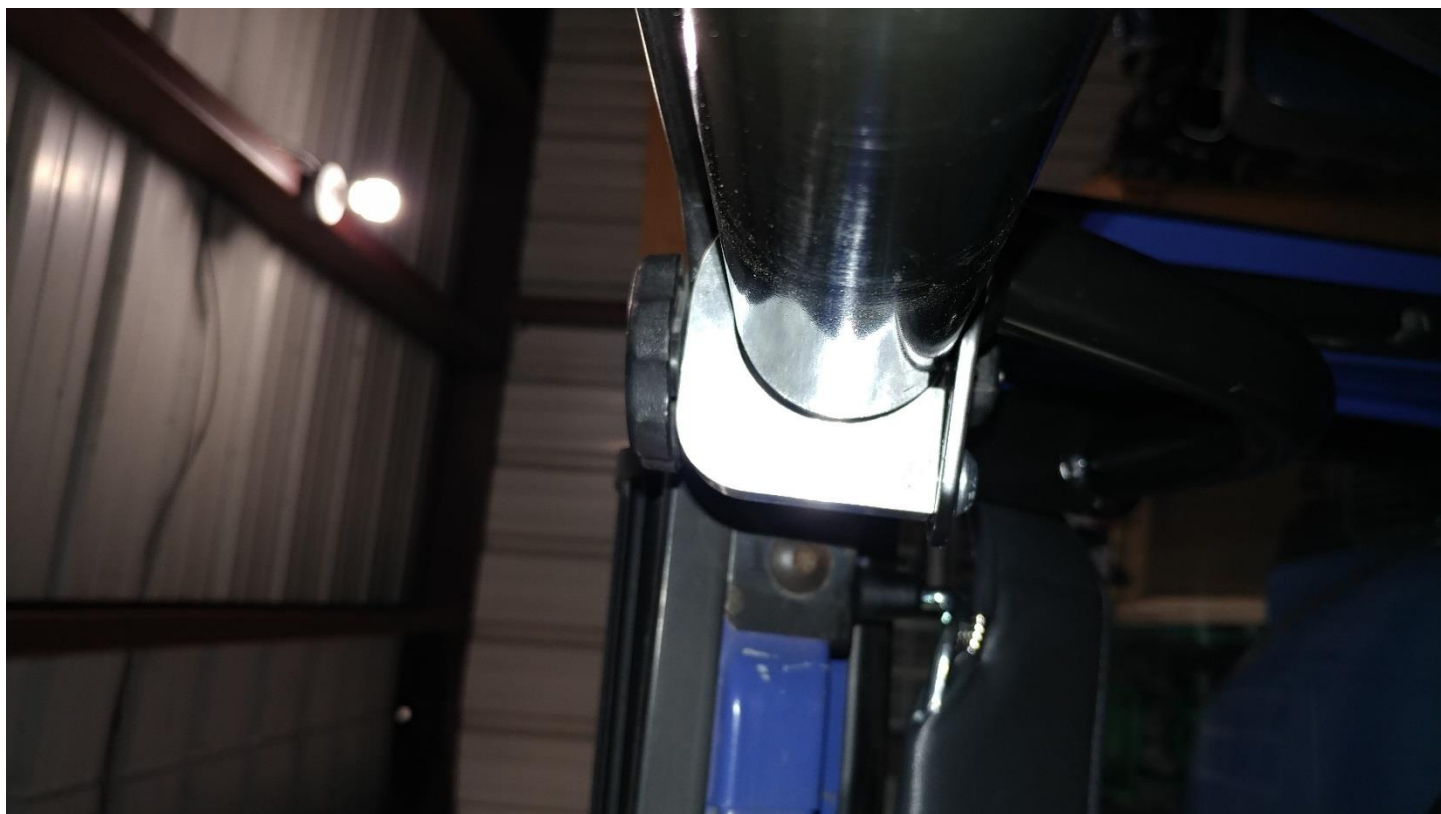

7. Once the 3/16 Allen is snug tighten the T40 factory screw also.



8. Installation complete

