

## Teraflex Front Swaybar Quick Disconnect Kit for 0-2.5 in. Lift

### Installation Guide for Jeep Wrangler '07-'16 2-Door JK

**Installation Time:** 1.5 Hours

**Tools Required:**

- ✓ Box Cutter/Knife
- ✓ 14mm Socket
- ✓ 18mm Socket
- ✓ 19mm Socket
- ✓ Socket Wrench
- ✓ Torque Wrench
- ✓ Crescent Wrench
- ✓ 6mm Allen Wrench
- ✓ Mallet (optional)

**Installation Instructions:**

1. Carefully open the package using a box cutter or knife (Figure A) and ensure the front swaybar links and hardware are included and undamaged.



Figure A

2. Using an 18mm socket wrench, remove the bottom bolt on the swaybar link (Figure B). *Note: If having trouble removing the bottom bolt and swaybar link, tap with a mallet.*



Figure B

3. Using a crescent wrench and a 6mm Allen wrench, remove the top bolt on the swaybar link (Figure C).



Figure C

4. Remove the swaybar link (Figure D).



Figure D

5. Insert the 3/4" stud (larger of the two studs) into the axle bracket with the 1/2" washer and 1/2" nylock nut on the other side of the bracket (Figure E).



Figure E

6. Torque the unlock nut to 75 ft-lbs using a torque wrench (Figure F).



Figure F

7. Connect the upper sway bar link of the new TeraFlex swaybar link into the upper bracket using the 7/16" washer and M12 nylock nut on the other side of the bracket (Figure G).



Figure G

8. Using a 6mm Allen wrench and a crescent wrench, tighten the upper swaybar link (Figure H).



Figure H

9. Torque the upper swaybar link to 75 ft-lbs using a torque wrench (Figure I).



Figure I

10. Slide the lower swaybar link onto lower stud (Figure J).



Figure J

11. With the lower swaybar link on the lower stud, place a 3/4" washer onto the lower stud and place the quick-disconnect bow tie pin into place (Figure K).



Figure K

12. Remove the front body mount nut (Figure L)



Figure L

13. Place the quick-disconnect retainer bracket in place, returning the nut (Figure M).

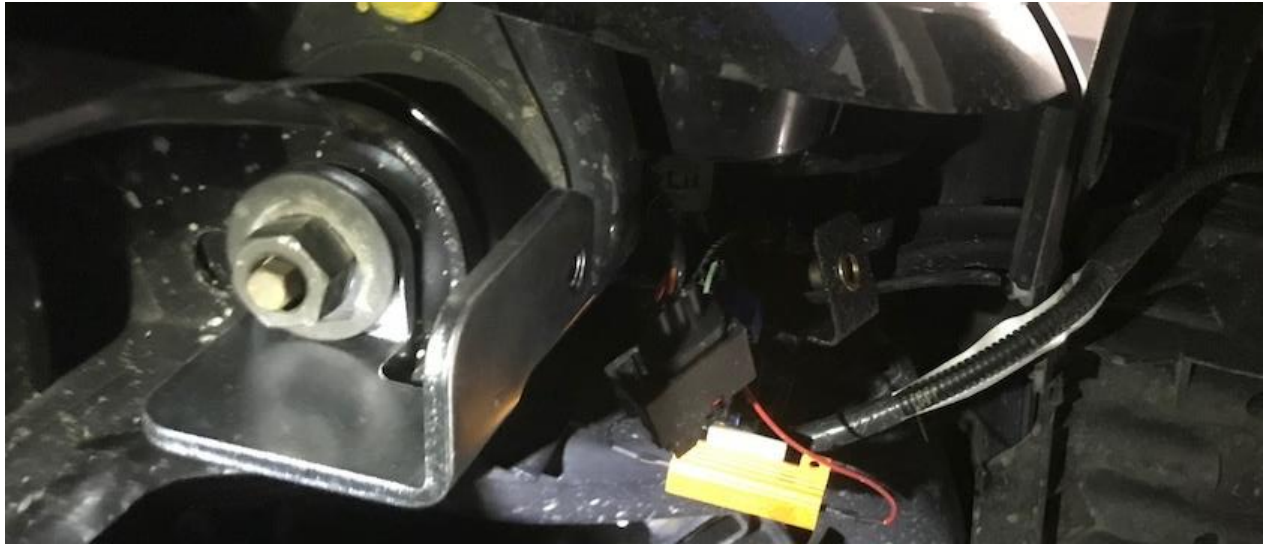


Figure M

14. Insert the 5/8" upper quick disconnect parking stud into the retainer bracket and connect the 3/8" jam nut (Figure N).

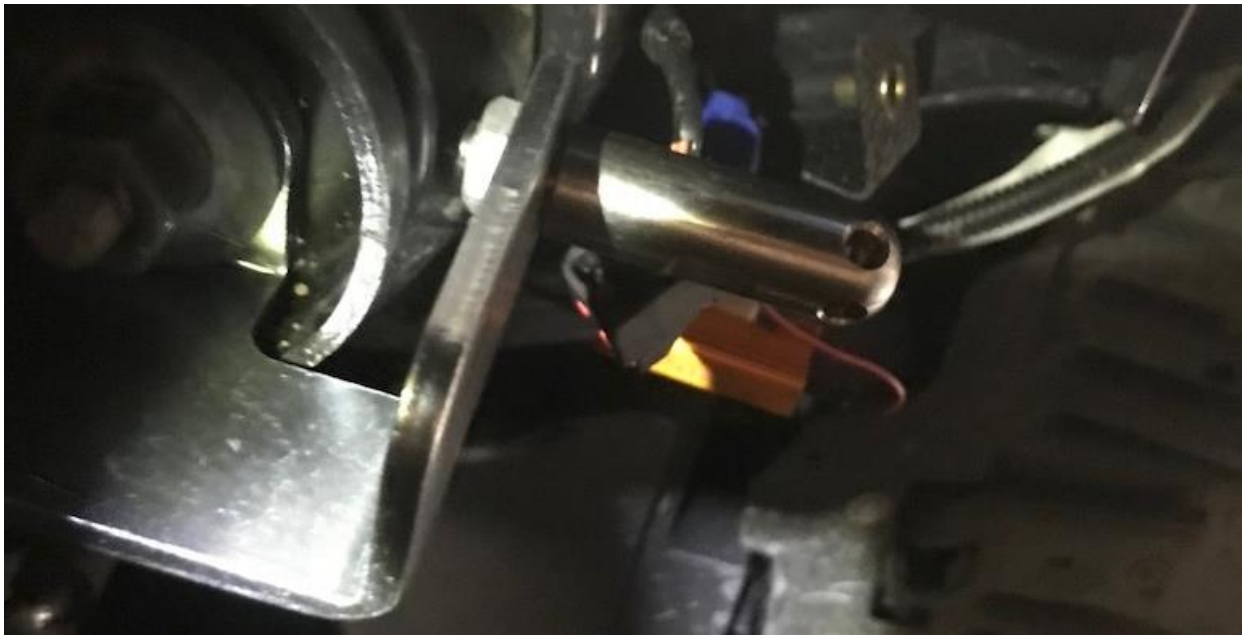


Figure N

15. Torque the body mount to 80 ft-lbs and the jam nut to 75 ft-lbs using a torque wrench.
16. Repeat steps 2-15 on the other swaybar link.





Before



After

Installation Instructions Written by ExtremeTerrain Customer J. Sandlin 01/13/2018