

Teraflex Sport Front Upper FlexArm Kit for 2.5-3 in. Lift Installation Guide for Jeep Wrangler '07-'18 4-Door JKU

Installation Time: 1.5 Hours

Tools Required:

- ✓ Jack
- ✓ Lug Nut Wrench
- ✓ 18mm Socket Wrench
- ✓ Torque Wrench

Installation Instructions:

1. Jack up the front side of the vehicle. Uninstall the front tires.
2. Peel back the heat shield from the upper portion of the upper control arm on the driver's side using a 10mm socket wrench.
3. Loosen the upper control arm using an 18mm socket wrench (Figure A).



Figure A

4. Using an 18mm socket wrench, loosen then remove the bolt holding the bottom side of the upper control arm (Figure B).



Figure B

5. Remove the upper bolt and set the driver's side front upper control arm to the side (Figure C).



Figure C

6. Slide the TeraFlex front upper control arm into place on the driver's side (Figure D).



Figure D

7. Slide the bolt back into place and thread into the captured nut (Figure E).



Figure E

8. Slide the bolt through the lower side of the TeraFlex front upper control arm (Figure F).

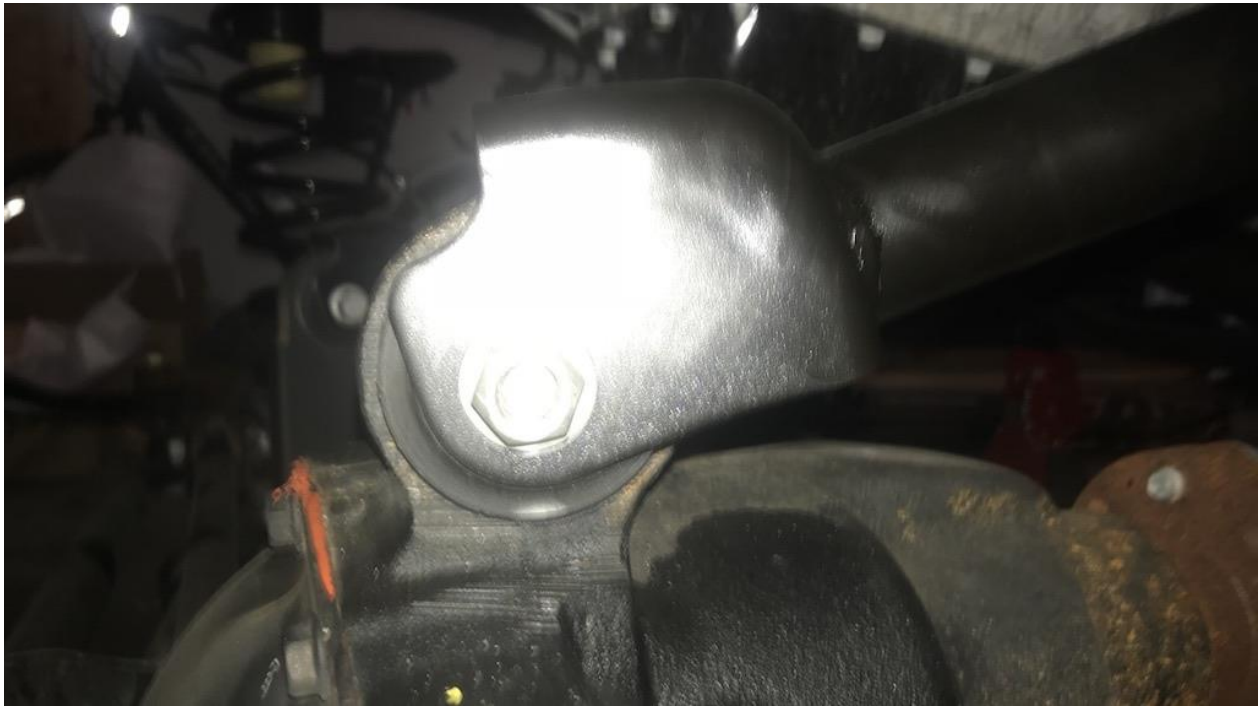


Figure F

9. Tighten slightly (but not all the way) (Figure G).



Figure G

10. Repeat Steps 2-9 on the passenger's side.
11. Reinstall the front tires and lower the vehicle.
12. Torque all four bolts to 125 ft. lbs.



Before



After

Installation Instructions Written by ExtremeTerrain Customer J. Sandlin 11/11/2018