

Tuffy Locking Cubby Cover

Installation Guide for Jeep Wrangler '07-'16 2-Door JK

Installation Time: <1 Hour

Tools Required:

- ✓ Box Cutter/Knife
- ✓ 1/8" Allen Wrench
- ✓ 1/2" Socket Wrench
- ✓ 1/2" Wrench/Crescent Wrench
- ✓ Torque Wrench (optional)

Installation Instructions:

1. Carefully open the package using a box cutter or knife (Figure A) and ensure the cubby cover and hardware are included and undamaged.



Figure A

2. Unclip the tethering mechanism from the factory cubby cover (Figure B).



Figure B

3. Pull up and away from the rear of the vehicle to remove the cover (Figure C).



Figure C

4. Sit the Tuffy locking cubby cover in place of the factory cubby cover just removed (Figure D).

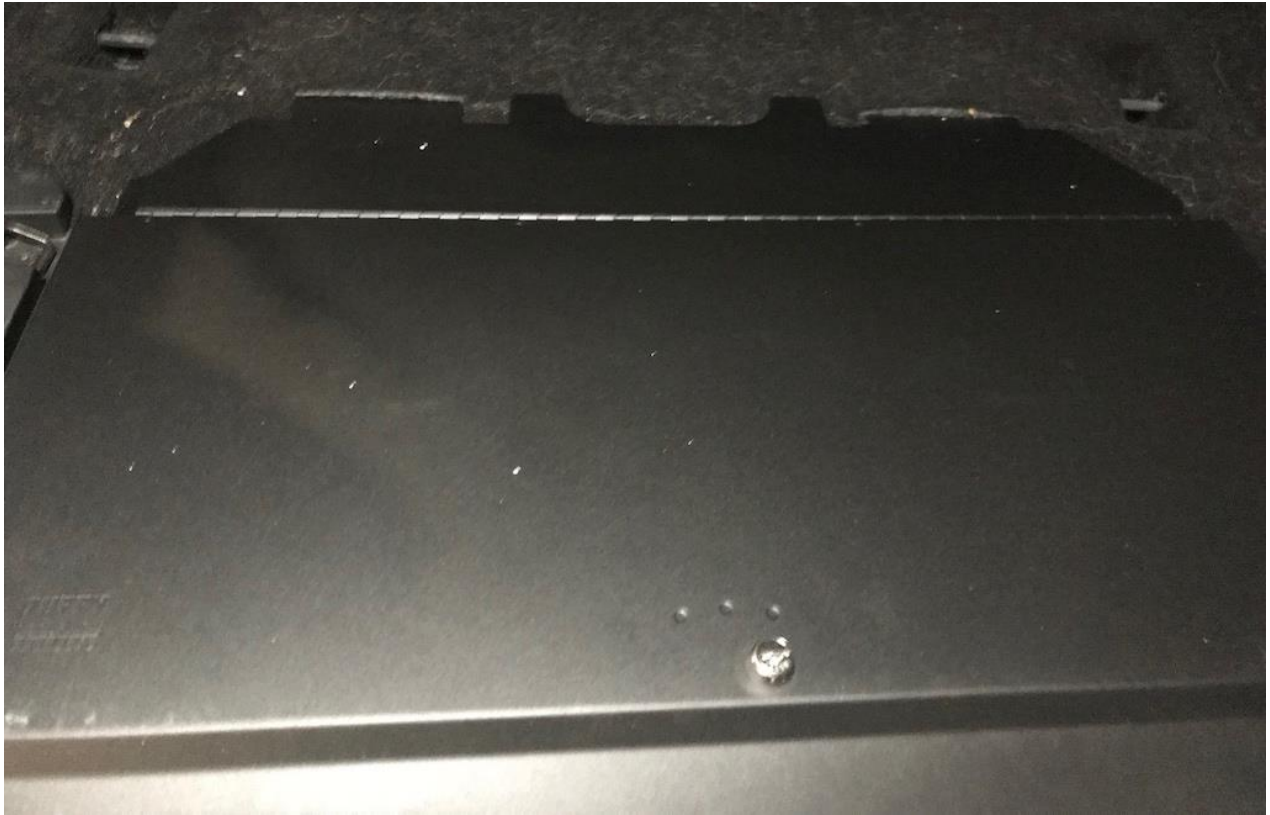


Figure D

5. Mount the cubby cover into place using a 1/8" Allen wrench and the supplied 10/32 x 1/2 screws and #10 washers (Figure E).



Figure E

6. Slide the lock bracket under the opening to the rear of the vehicle (Figure F).



Figure F

7. Place the lock bracket clamp on top of the location of the lock bracket (Figure G).



Figure G

8. Install the lock bracket and lock bracket clamp into place by placing the supplied 5/16" x 7/8" bolts, 5/16" washers onto the lock bracket clamp and tightening the 5/16" washers and 5/16" locknuts under the lock bracket using a 1/2" socket wrench and 1/2" wrench (Figure H). Torque to 15 ft-lbs.



Figure H

9. Close the cubby cover over the lock bracket clamp and ensure locking mechanism works properly (Figure I).



Figure I



Before



After

Installation Instructions Written by ExtremeTerrain Customer J. Sandlin 01/18/2018