

## ZRoadz 6 in. Single Row Slim Line Straight LED Light Bar - Flood Beam

### Installation Guide for Jeep Wrangler '07-'18 4-Door JKU

**Installation Time:** 1 Hour

**Tools Required:**

- ✓ Box Cutter/Knife
- ✓ Wiring Harness
- ✓ 10mm Socket
- ✓ Socket Wrench

**Installation Instructions:**

1. Attach a positive wire from a wiring harness to the positive terminal of the battery (Figure A).



Figure A

2. Attach a negative wire from a wiring harness to the negative terminal (Figure B).

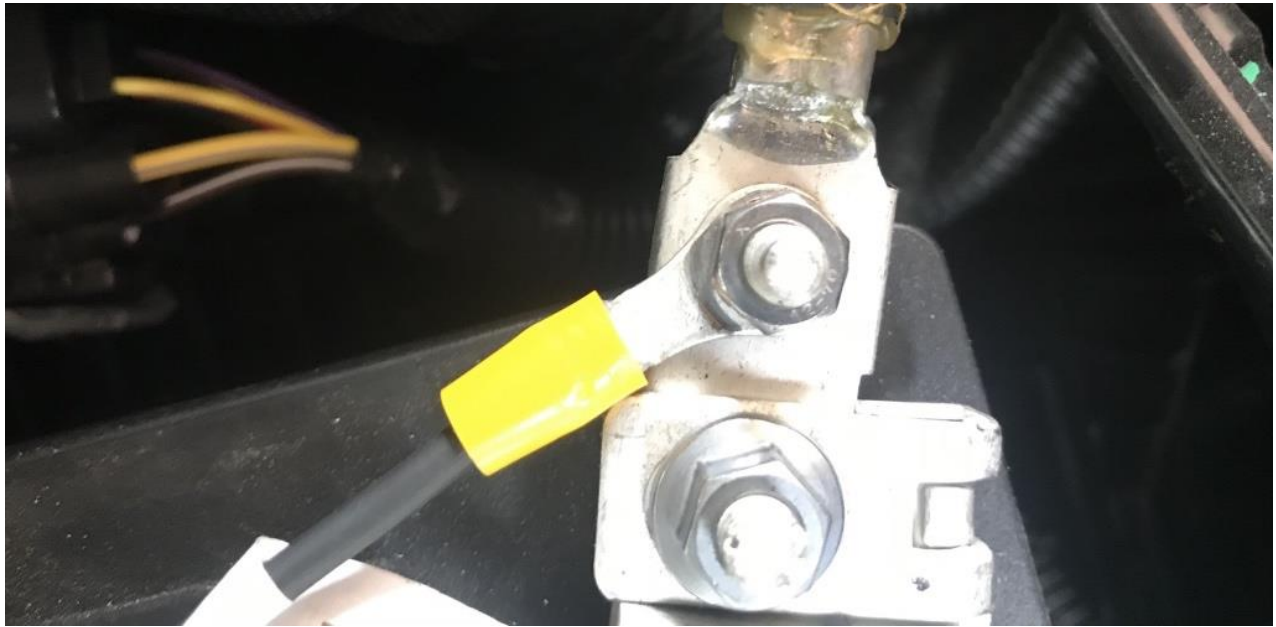


Figure B

3. Remove the support bolt from the LED light bar (Figure C).



Figure C

4. Place the bracket onto the support bolt (Figure D).



Figure D

5. Place the nut back on the support bolt (Figure E).



Figure E

6. Tighten the nut on the support bolt completely.
7. Repeat Steps 3-6 on the other side of the LED, as well (Figure F).



Figure F

8. Mount the bracket to the vehicle on both sides (Figure G).



Figure G

9. Run the wiring harness to the mounting location (Figure H).



Figure H

10. Connect the wiring harness to the LED (Figure I).



Figure I

11. Connect the wiring harness to a switch (not supplied).



Before



After

Installation Instructions Written by ExtremeTerrain Customer J. Sandlin 07/15/2018