

## Installation Instructions for RedRock4X4 Cold Air Intake (Wrangler 3.8L)

### TOOLS REQUIRED:

10mm socket  
8mm socket  
Flathead Screwdriver  
Allen Key Set

### Step 1:

Unplug your factory IAT sensor located on the side of the intake tube.



### Step 2:

Slide the PCV hose off of the factory air hose.



### Step 3:

Using a flathead screwdriver, remove the hose clamp holding the intake tube to the throttle body.



### Step 4:

Pull the entire intake assembly up and away from the vehicle.



### Step 5:


Remove your factory IAT sensor from the factory intake tube.





**Step 6:**

Install the IAT sensor into the new intake tube assembly.

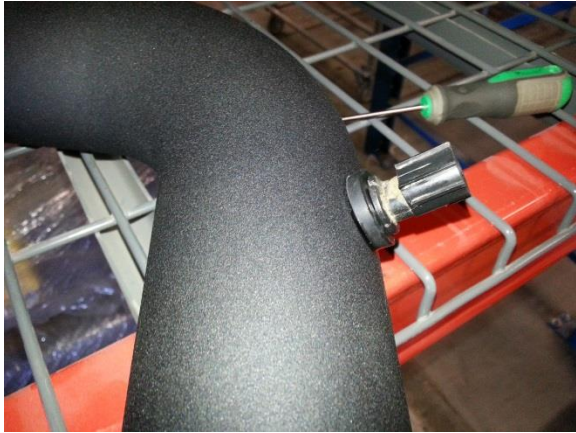

**Step 9:**

Install the heat shield using the factory mounting positions and secure with bolts.



**Step 7:**

Using the (6) supplied nuts and screws, assemble the new heat shield as shown.



**Step 10:**

Add the supplied rubber gaskets to the top of the heat shield and in hole for the intake.




**Step 8:**

Remove the 8mm screw holding the fan shroud to the radiator.



**Step 11:**

Install the intake tube onto the coupler and onto the factory throttle body.

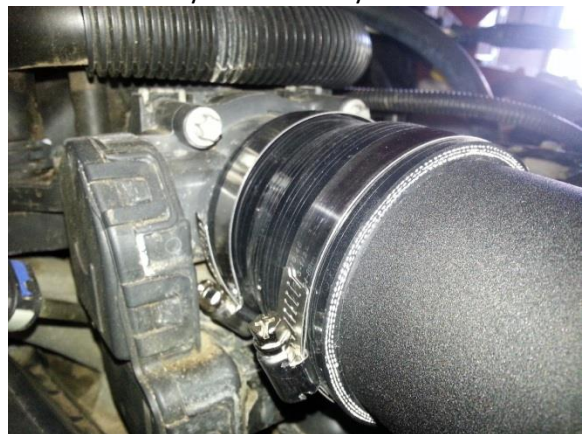

**Step 12:**

Secure the intake tube to the heat shield using the supplied spacer.



**Step 15:**

Install the filter and tighten down using the supplied hose clamp.



**Step 13:**

Reinstall the factory PCV hose onto the new intake tube and secure with new clamp.



**Step 14:**

Plug in the IAT sensor that you previously installed into the intake tube.

