



ROCK SLIDERS

(2007-2018 Wrangler JK)

INSTALLATION INSTRUCTIONS

CONTENTS

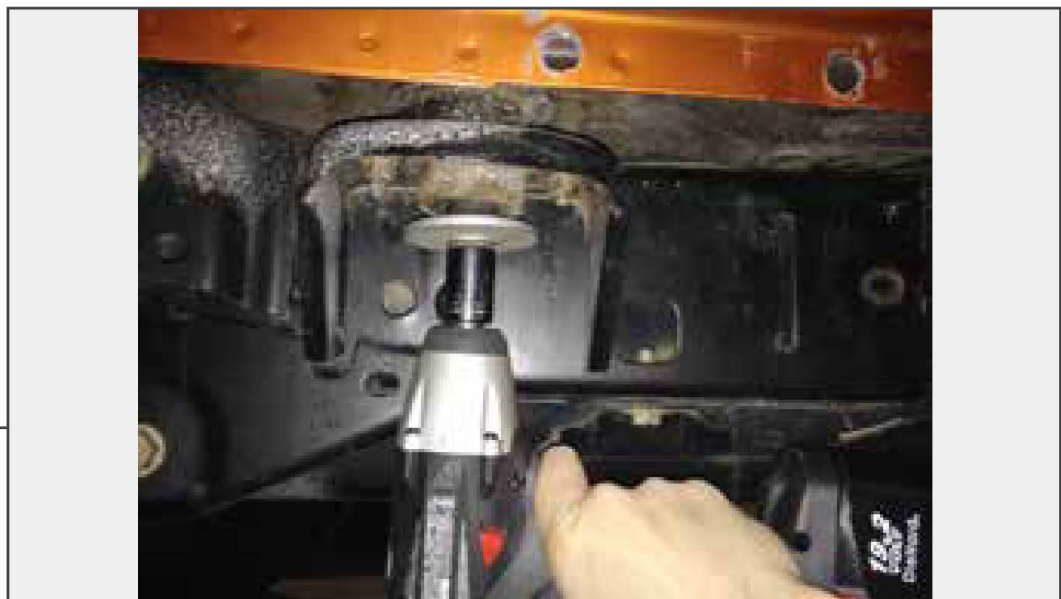
(2) Rock Sliders

TOOLS REQUIRED

18mm Socket
Impact Gun or 1/2" Ratchet

STEP 1

Begin by locating the body mounts that run along the frame of the vehicle. There are (3) for 4-doors, and (2) for 2 doors.

STEP 2

Using an impact gun or ratchet, remove the 18mm body mount bolts from the body. It may help to treat the bolts with the PB Blaster or a WD-40 prior removing the body mount bolts.

**STEP 3**

With the body mount bolts removed, line the rail up with the holes and hand tighten each bolt. Once you have all the bolts in place, torque each bolt to factory torque specs (80 ft. lbs.)