



1997-2006 Wrangler Rear Fenders

Contents:

- (1) - Left Side Fender
- (1) - Right Side Fender

Tools Needed:


- 8mm socket
- socket wrench
- adjustable wrench
- pliers



It is recommended that you have an additional person available to help during this installation, parts can be awkward to hold and support by yourself. Block wheels and set the parking brake before beginning work.



Pull back the fender liner from the lip of the fender. Squeeze the well liner retainer tab and push it back through the fender. Remove any other hardware holding the wheel well liner in place.

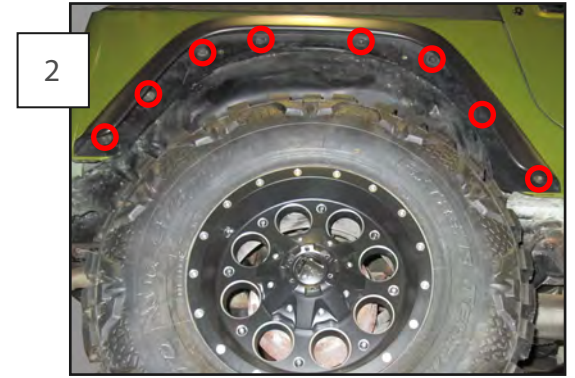

Remove the (8) - 8 mm screws holding the fender flare to the body. Insert the adjustable wrench behind the body to hold the square plastic nut while removing the 8 mm screw with a socket wrench. The front 2 screws thread into the body.



Reinstall (6) of the (8) 8 mm screws that were removed. (5) of the plastic nuts will be reused and 1 screw will thread into the body.