REDROCK \$ 2007-2014 Wrangler Front Fill Plate

Contents:

(1) - Front Fill Plate

Tools Needed:

Adjustable Wrench




It is recommended that you have an additional person available to help during this installation, parts can be awkward to hold and support by yourself.



Remove the top bolt of your tube bumper.



Lay the Filler Plate into place and align it with the stock, rear filler plate. The center holes are for routing wire. If lights are already installed, disconnect them and run the wires through the wire holes.

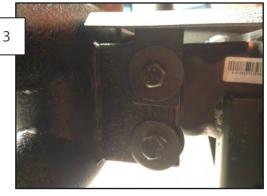

Reinstall the upper tube bumper bolt through the filler plate and tighten it down, while making sure the plate is level with the frame.