

Barricade Side Marker Guard Instructions

Installation Time: 10 Minutes

Tools Required:

- ✓ Alcohol Pad (supplied)
- ✓ Utility Knife



Installation Instructions:

1. Thoroughly clean the surface of the side marker with the alcohol pad (Pic 1)




(Pic 1)

2. Allow the side marker to dry. (Pic 2)



Pic 2

3. Remove the 3M tape backing (Pic 3)

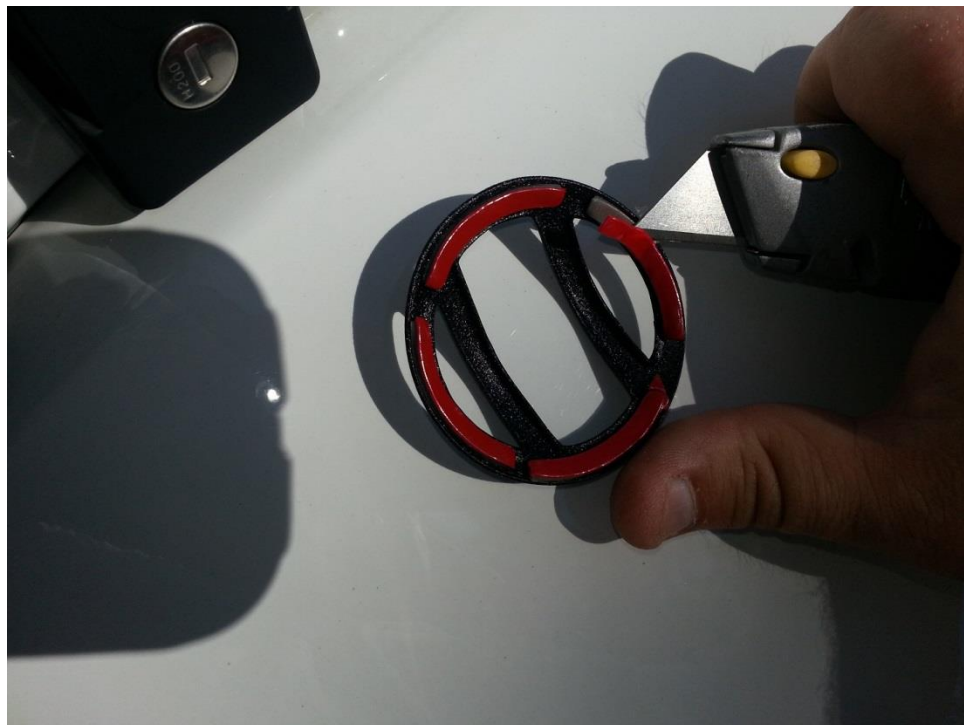

Pic 3

4. Align the guard over the marker and press firmly. Be sure to press evenly to seat the guard. (Pic 4)



Pic 4

5. Finished.

