

RedRock 4x4 Trail 13 in. Short Antenna (07-17 Wrangler JK)

Installation Time: 10 Minutes

Tools Required:


- ✓ 3/8 inch open end box wrench or adjustable crescent wrench

Installation Instructions:


1. Before:



2. Loosen the factory antenna using a 3/8 inch open end box wrench or adjustable crescent wrench.

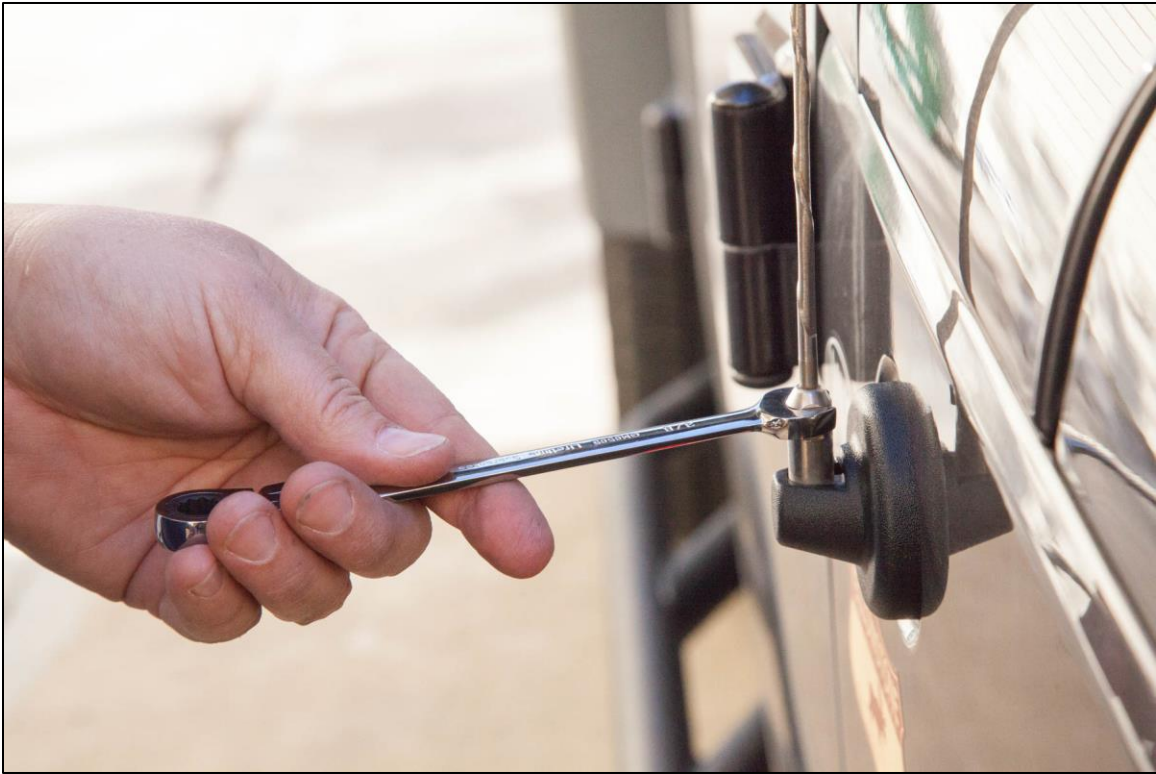

3. Unscrew the factory antenna by hand in a counter-clockwise direction until fully disengaged.

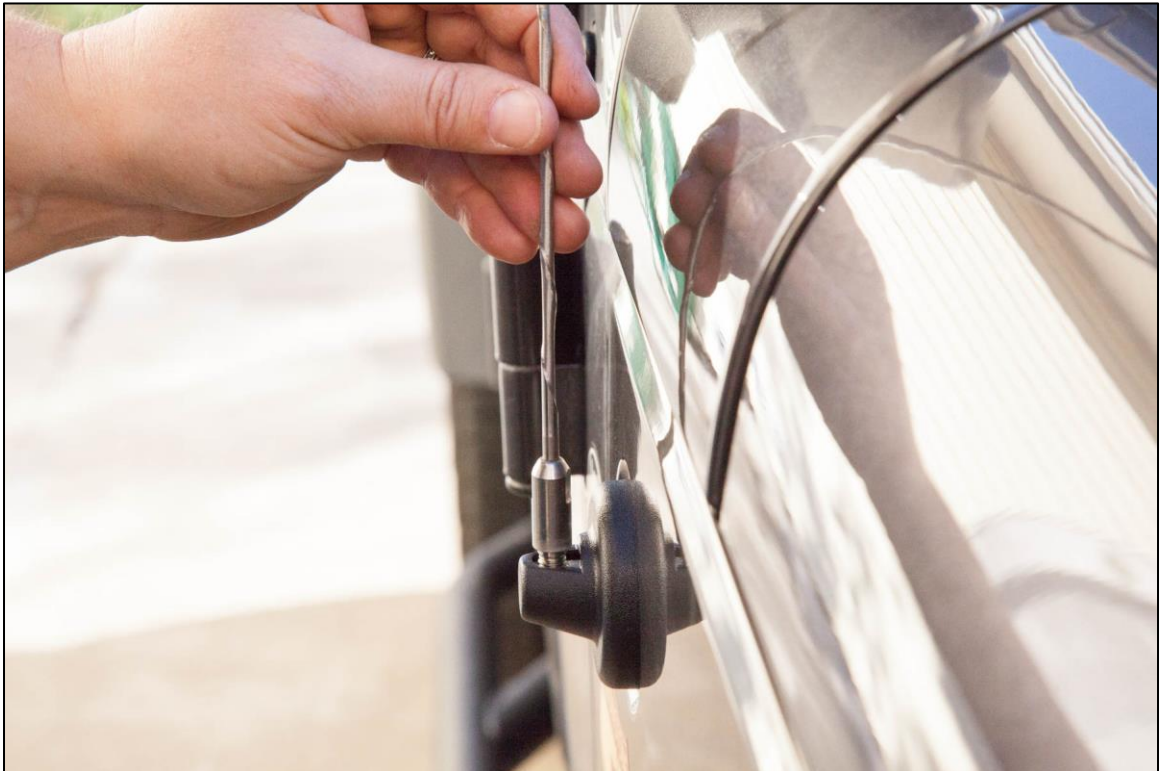

4. Attach the new RedRock 4x4 Trail 13 in. Short Antenna and tighten by hand until secure.



5. After:



Installation Instructions Written by ExtremeTerrain Customers Rhea and Valerie Lovan 12/05/2016