

Installation Instructions Wire Mesh Grille

07-13 Jeep Wrangler 1PC

PART #: J101601 / J101600

(Overlay)

IMPORTANT NOTICE:

Carefully read the instructions before attempting to install this product. The manufacturer is in no way responsible for any damage to the vehicle or personal injury that may occur during the installation or use of this product.

NOTE: During shipping product might loose its convex shape or the bars may bend slightly. In order to get a proper fit, product might need to be re-shaped slightly by bending it BY HAND to regain its convex shape. Be careful not to damage the Billet Grille when bending.

INCLUDED COMPONENTS

- 1 Grille (1 piece)
- 8- M4*12mm Philips Screws
- 8 M4 Flange Nuts
- 8 Washer



TOOLS REQUIRED

- Phillips Screwdriver
- 4mm Wrench

INSTALLATION INSTRUCTIONS

Figure 1 - Included Hardware

- 1. Inspect product and check components with items listed above.
- 2. Pop Hood, remove plastic shroud at the top and set fasteners aside.
- 3. **Optional:** Using factory instructions, remove the entire front grille shell (as pictured in all Figures).
- 4. Position the Grille behind of the grille shell cavity (Figure 2).



Figure 2 - Front View of positioning Grille

- 5. Mark locations for drilling through the other hole of Brackets. Then drill holes on the marked location
- 6. Attach the Grille to the shell by inserting the screws through the brackets and shell, secure them with washers and Flange Nuts provided (Figure 3).



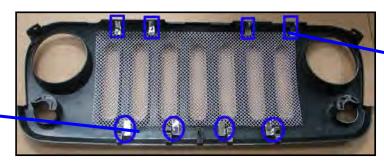




Figure 3 – Rear view of vehicle's shell; Grills attached with Metal Brackets and Flange Nuts

7. Reinstall the plastic shroud with the fasteners removed in Step 2.