


ARB Intensity Flood Light Installation Guide

Installation Time: 1 hour

Tools Required



- ✓ Ratchet and 19mm socket
- ✓ 19mm wrench
- ✓ Tamper proof Torx allen key (provided with hardware kit)

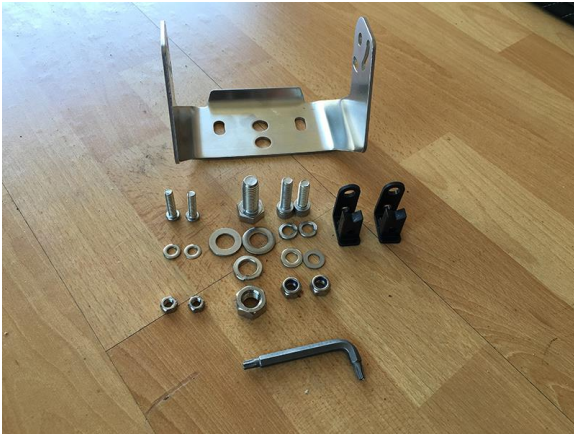

Hardware kit: The ARB Intensity light comes with all of the mounting hardware needed to install the light, including the allen key for the tamper proof torx bolts.

Installation Instructions:

1. Place the light, face down on a soft surface, the foam packaging will work well. Insert the 1 x M8 Nyloc nut and 1x 6mm nut into the appropriate slots, ensuring that the nylon en is facing in towards the light.



2. Insert the black plastic spacer to keep the bolts in position.




3. Slide the mounting bracket onto the light, with the lip towards the face. Align the holes with the appropriate bolts.



4. Insert and loosely tighten the M6 Tamper Proof Torx bolt with washer and the M8 cap screws with spring and flat washers.



5. Position the light onto the mounting location. If you're mounting the light to a location that will require drilling, use the provided drilling template found on the box flap. If you're mounting the light to a pre-drilled location attach the light bracket with the M12 bolt, spring and (2) flat washers and nut.

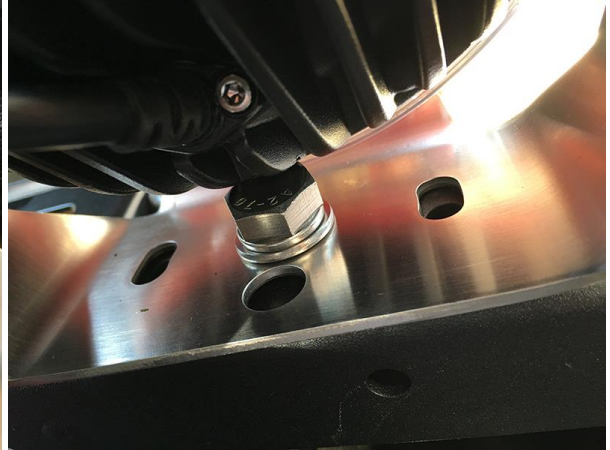

6. Once the light has been properly positioned and aimed, tighten all the hardware. Use a 19mm socket and wrench to secure the mounting bracket and the supplied Tamper Proof allen key for the Tamper Proof bolt.



7. Finally, the lights come pre-wired with a Deutsch DT-06 connection, you might want to consider using a wiring harness or cut the connection and wire directly to a power source.

Before



After

