


DELTA DOT HEADLAMP KIT Headlamp Replacement for JEEP Wrangler JK 2007 - Current 1148 (w/adapter)

INSTALLATION INSTRUCTIONS

1. Remove your existing headlamps by first unscrewing the grill fascia surrounding the headlamp.
2. Remove the ring holding the headlamp with (4) four screws.
3. Unplug the socket in the back of the headlamp element and plug in the H13 adapter (provided)
4. Plug in your DELTA DOT headlamp assembly into the adapter and screw back to the headlamp bucket using your factory bezel and screws.

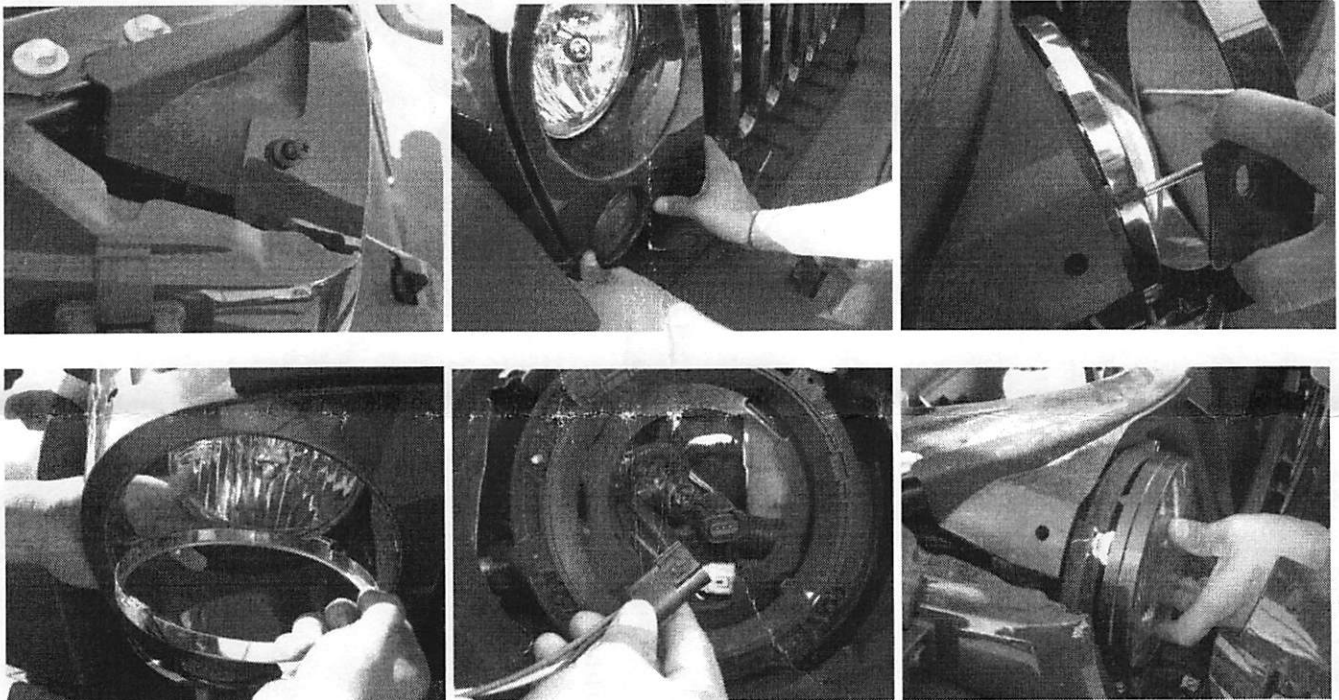

5. Re-install the grill fascia by pushing in the screws in position.

NOTE: When installing be sure rubber boot is snugly fitting over the reflector providing a good seal against moisture. In the event any moisture is trapped inside the headlight causing it to steam up, please follow these procedures: Peel back the rubber boot and carefully remove the bulb by releasing first the bulb spring. Allow vapor to escape by holding the headlight in sunlight or using a hair dryer. When completed, assemble the bulb and re-seal the boot around the reflector. Happy four wheeling!

Your visibility and safety should improve significantly even if you remain with the halogen light source. Your light performance will be dramatically improved with the use of Xenon, H.I.D. or LED options.

Assembled in U.S.A.