

Installation Instructions for VISION X TANTRUM LED ROCK LIGHT - RED


Installation Time: 3 Hours

Tools Required:

- ✓ Needle Nose Pliers
- ✓ Screw Driver
- ✓ Zip Ties
- ✓ Electrical Tap (optional)


Installation Instructions:


1. Layout all lights by length and then place in desired location under your Jeep. Create a diagram either by drawing or download this one and mark on it.

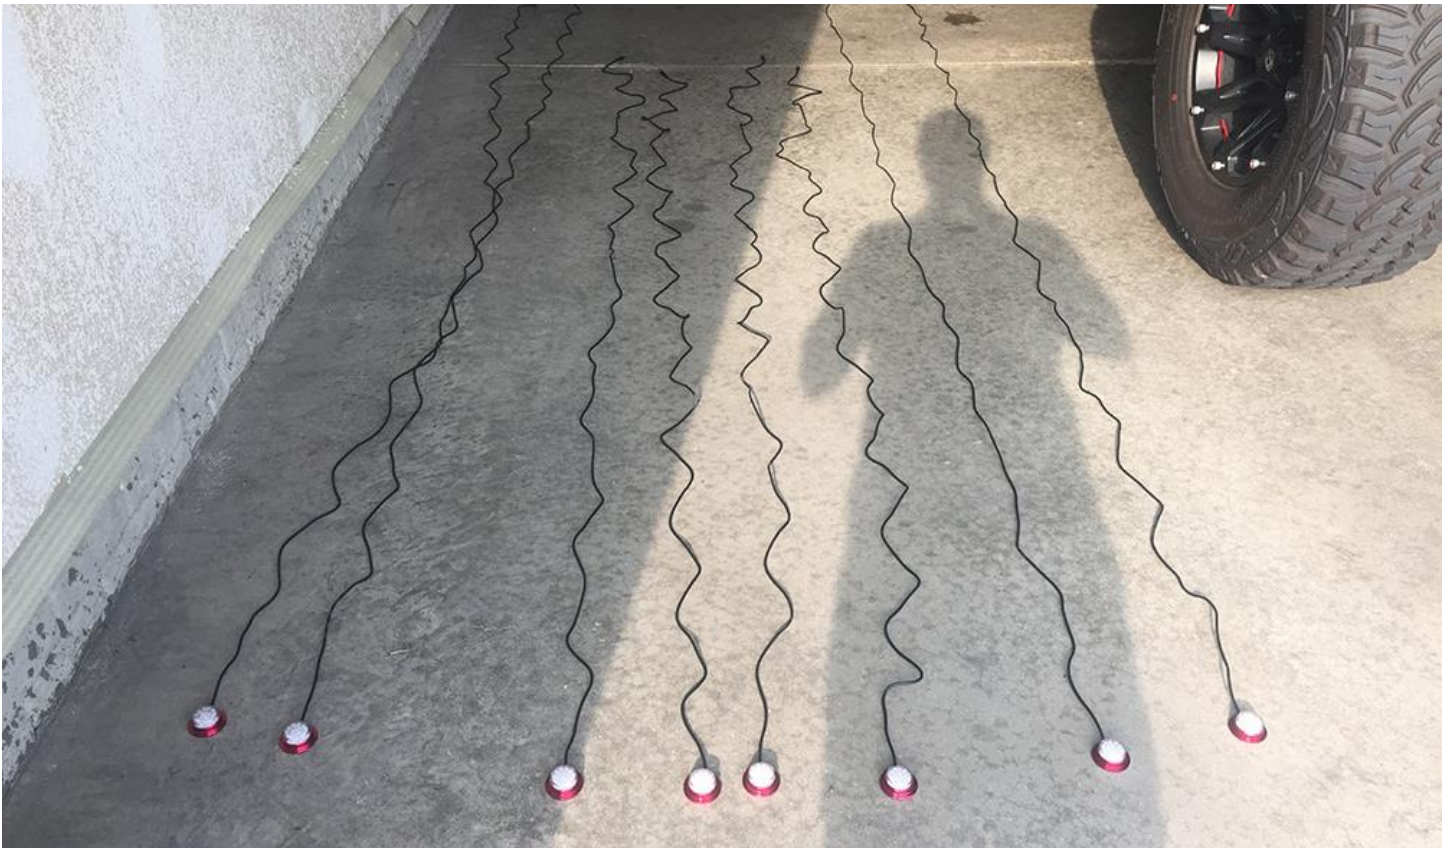



2. Install Rock Lights and run all wiring to the passenger side undercarriage. Option: Use magnets with some Gorilla glue to help secure if you don't use the wire clips.

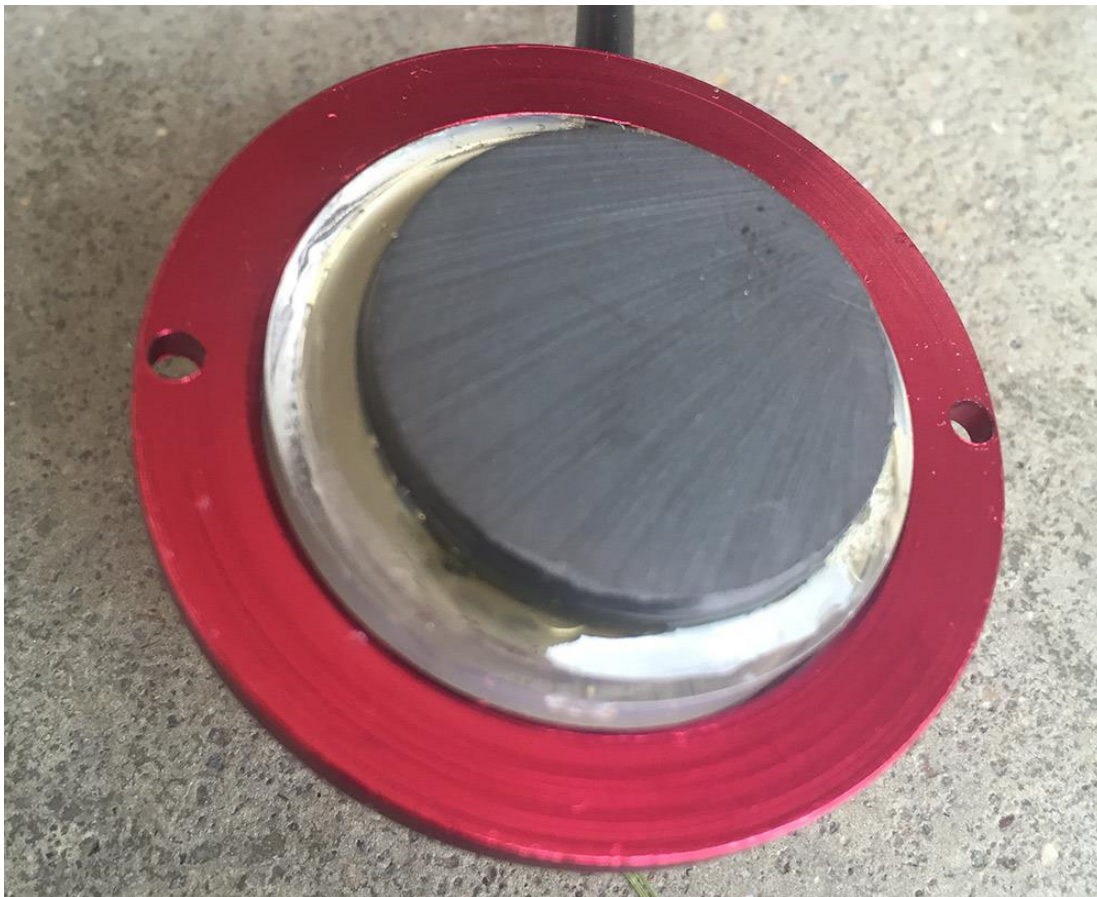

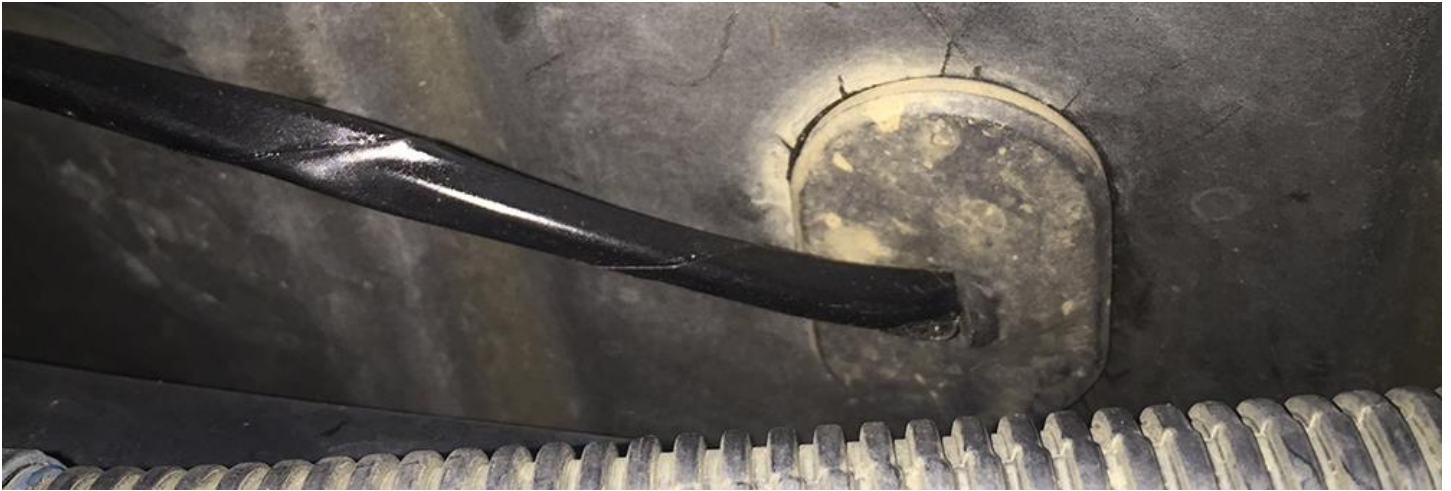

3. Once all wiring is run through passenger floor plug and into the passenger interior compartment plug all wiring into adapter.



4. Arrange adapter and power supply inside behind lower dash console and plug in to ensure all lights are receiving power.



5. Go back and zip tie and properly mount wiring securely. Once installed your ride should look something like this:

