

## **Installation Instructions for Rugged Ridge All Terrain Floor Liner Kit, 4-piece, Black (07-10 Wrangler JK 4-Door)**

**Installation Time:** 10-15 Minutes

**Tools Required:**

- ✓ 1 Knife or box cutter (only if your model is equipped with rear subwoofer)

**Installation Instructions:**

1. Open all doors and prepare to remove existing floor liners










2. Cargo mat and rear floor mats will easily pull out, drivers side and passenger side front mats have a small tab that you must unhook. Pull floor mat down from the top and tap will easily slide out.



3. Install new floor liners. Drivers side and passenger side front liners will need tab inserted to hold in place. Slide tab into hole and lay mat down from the bottom to the top.



4. Install rear floor liner by lining up the cut-outs with the metal supports from the seat.

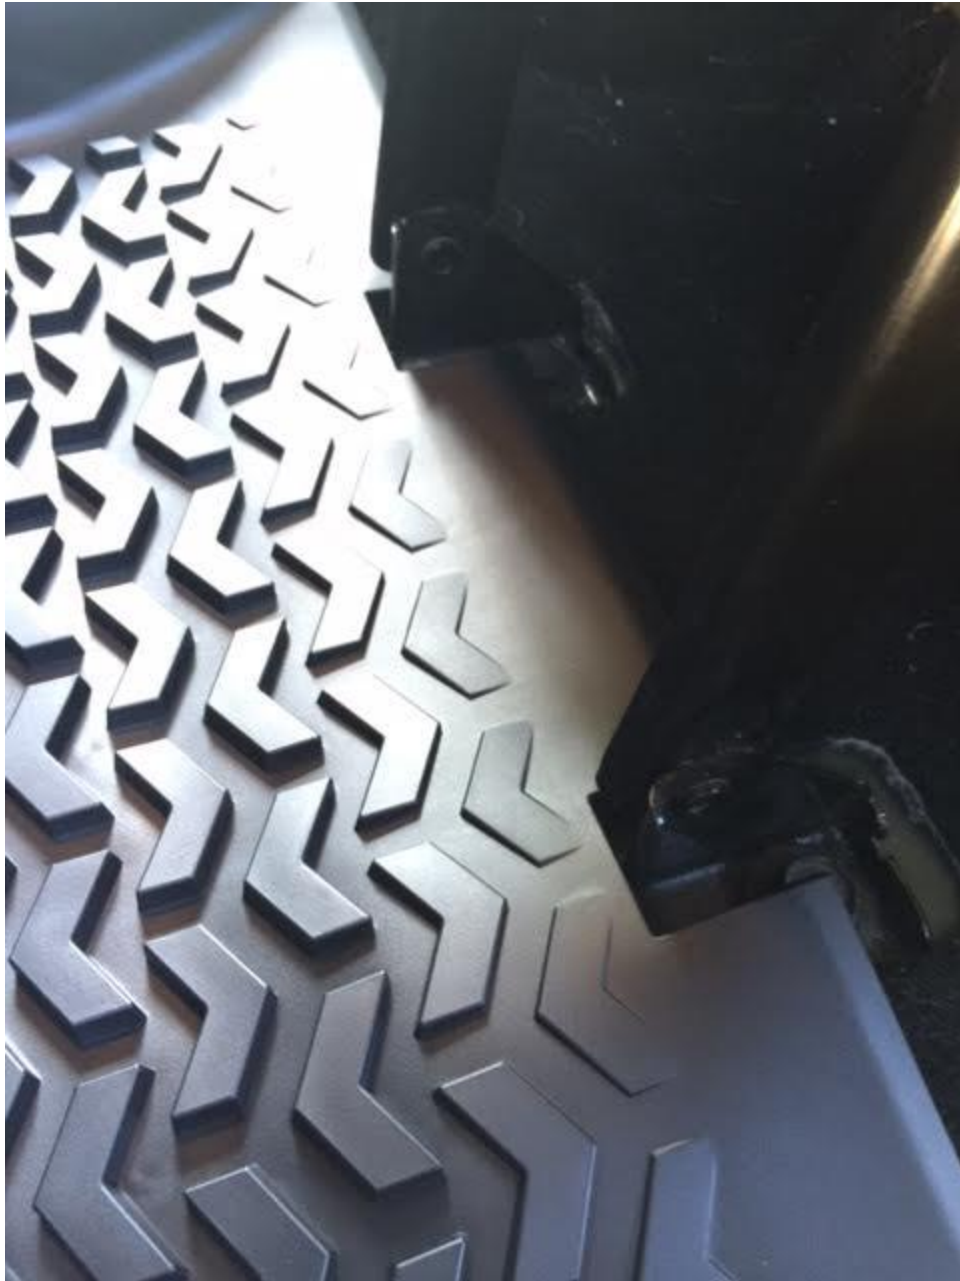

5. If you do not have the rear subwoofer, cargo mat will just lay in place. If you do have the rear subwoofer, you will need to trim the floor liner along the provided cut line.



6. Once that portion is cut out, simply set the cargo mat in place.




7. Finished product







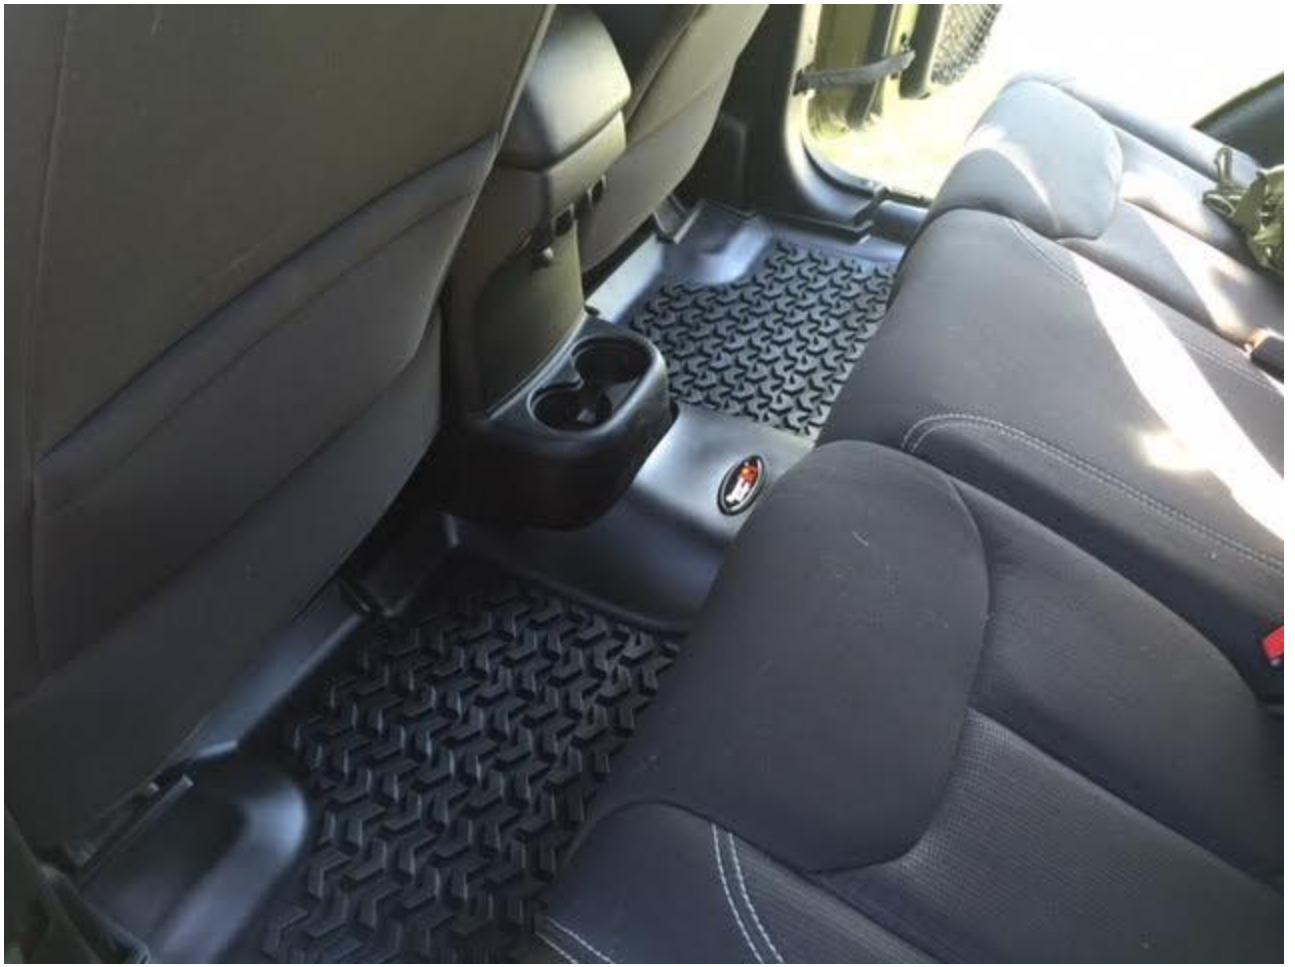



Installation Instructions Written by ExtremeTerrain Customer Bob Maxwell 07/23/2016