



Barricade Full Width Bumper Installation Instructions (07-13 Wrangler 2 & 4 Door)

Contents

- (1) - Bumper
- (8) - Large Washers
- (8) - Lock Washers
- (8) - Nuts
- (8) - Plastic Screw Inserts
- (8) - Phillips Screws
- (4) - Plastic Hole Caps

TOOLS REQUIRED

- Flathead Screwdriver
- Phillips Screwdriver
- 13,15,17,18,19mm Sockets
- 13, 15, 17, 18 19mm Wrench



STEP 1 // Remove the 6 pins holding the splash guard onto the vehicle



STEP 3 // Remove the 2 push pins holding the top cover onto the vehicle



STEP 2 // Next, unplug the factory fog lights and loosen the (8) 19mm nuts holding the front bumper to the support beam of the vehicle.



STEP 4 // To remove the fog lights, loosen the 4 phillips screws on each light.



STEP 5 // Insert the supplied plastic screw retainers.



STEP 8 // In most cases, the fog light harness will need to be extended. Cut and splice the wires to the appropriate length.



STEP 6 // Using the supplied screws, secure the fog light housing to the bumper.




STEP 9 // Insert the winch nuts into the winch housing.




STEP 7 // Slide bumper into place, and secure using the supplied hardware.



STEP 10 // Line up the bolt holes with the rear most holes on the bumper. Using the bolts supplied with the winch, secure to winch to the bumper.

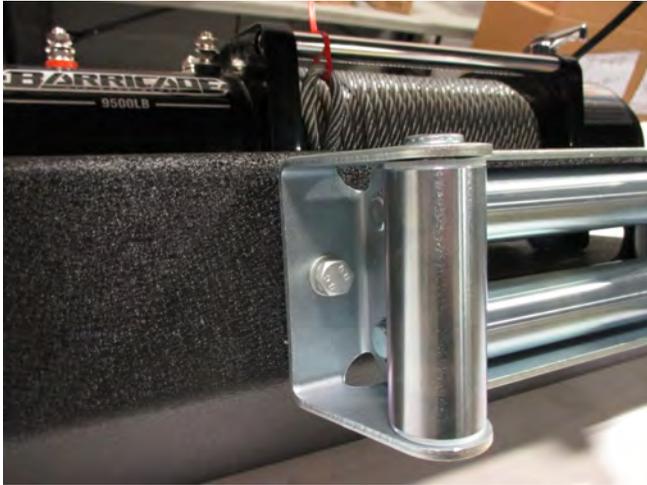

STEP 11 // Attach the roller fairlead supplied with the winch using the 2 bolt holes on the front of the bumper.

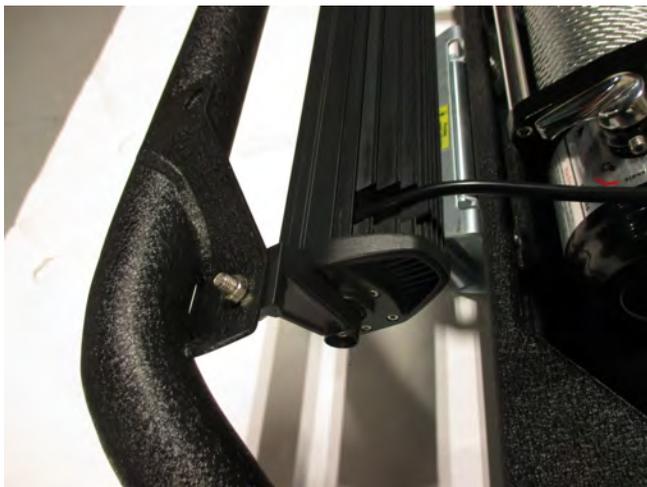

STEP 12 // Install the LED Light bar using the brackets and hardware supplied with the 21" LED Light.

