



Barricade Stubby Bumper Installation Instructions (07-13 Wrangler 2 & 4 Door)

Contents


- (1) - Bumper
- (8) - Large Washers
- (6) - Lock Nuts
- (2) - Lock washers
- (2) - Bolts

TOOLS REQUIRED

- Flathead Screwdriver
- Phillips Screwdriver
- 13,15,17,18,19mm Sockets
- 13, 15, 17, 18 19mm Wrench



STEP 1 // Remove the 6 pins holding the splash guard onto the vehicle

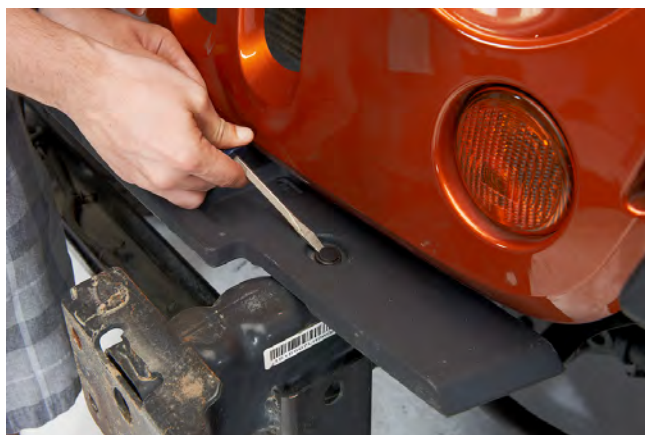

STEP 3 // Remove the 2 push pins holding the top cover onto the vehicle



STEP 2 // Next, unplug the factory fog lights and loosen the (8) 19mm nuts holding the front bumper to the support beam of the vehicle.



STEP 4 // Install new bumper using the supplied hardware.




STEP 5 // Insert the winch nuts into the winch housing.



STEP 8 // Install the LED Light bar using the brackets and hardware supplied with the 21" LED Light.



STEP 6 // Line up the bolt holes with the rear most holes on the bumper. Using the bolts supplied with the winch, secure to winch to the bumper.

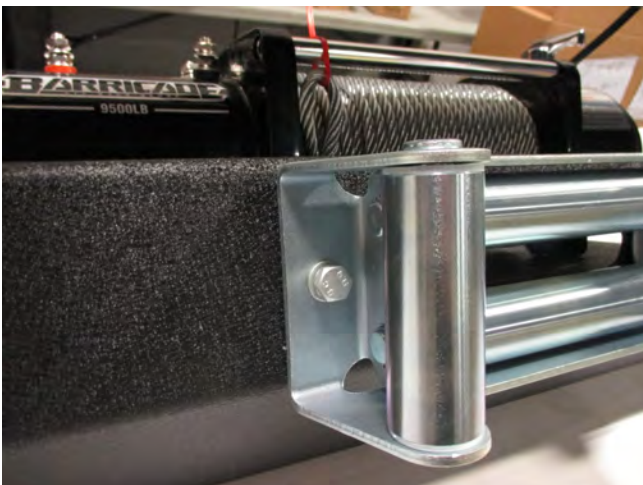

STEP 7 // Install the roller fairlead using the bolts supplied with the winch