

# RAXIOM LED HEADLIGHTS (07-16 WRANGLER JK)

**Installation Time:** 2 hours

**Tools Required:**

- ✓ Torx #15 bit or screwdriver
- ✓ Flat head screwdriver
- ✓ Pliers (optional)

**Installation Instructions:**

1. Before Picture



2. Remove the 6 Plastic clips on top of the grille with a flat head screwdriver and pull grille off the snap clips at the bottom. To completely, remove the grille the turn signals will need to be unplugged as well.





3. Use a ratchet with a torx #15 bit or a torx #15 screwdriver to remove the 4 screws from the bezel from around each headlight and set the bezel aside.



4. Remove factory headlights by unplugging each from the wiring harness and set them aside.



5. Assemble the wiring harness with the anti-flicker module that is included with the headlights as shown below. Plug directly into the factory wiring harness that is still in the jeep and then push the red clip down to relock the harness into place (If the red clip gives any trouble, this is where pliers were used to gain more leverage).

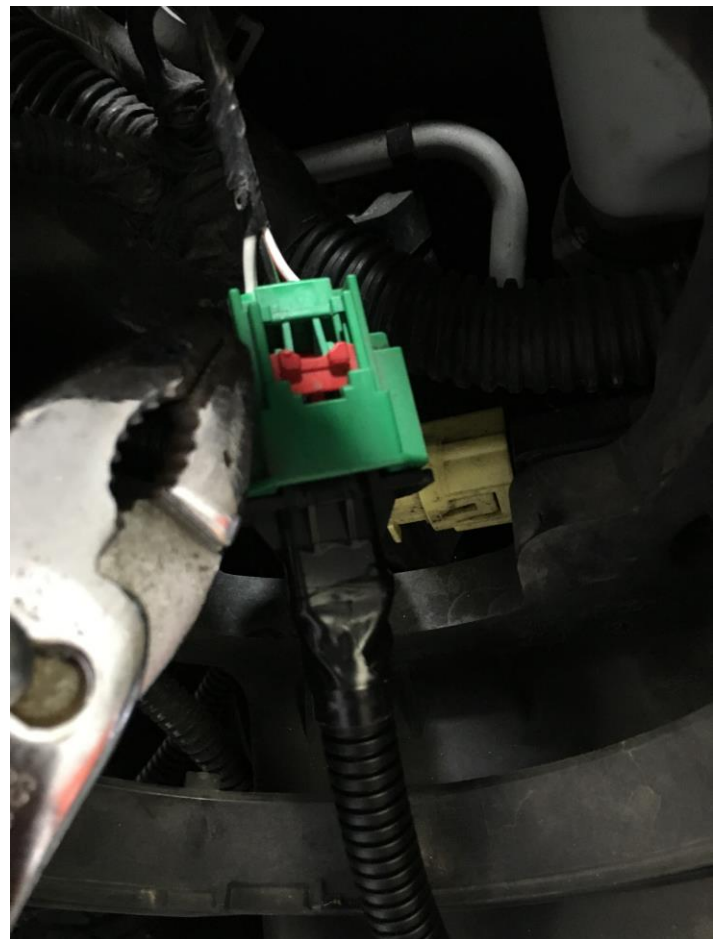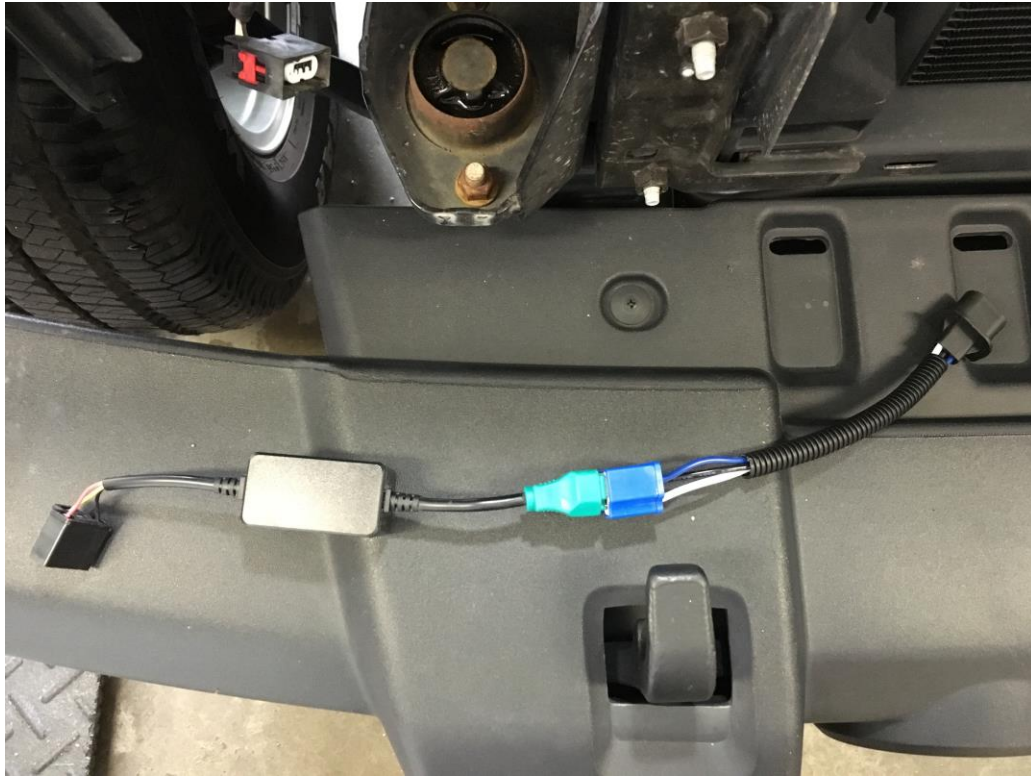




6. Take the other end of the harness and now plug it into the new Raxiom led headlight. Place the headlight into position and realign the plastic tabs so that the headlight sits flush in place.



7. Place the bezel back around the headlight and use the torx #15 screwdriver to tighten the 4 screws back into place on each headlight.

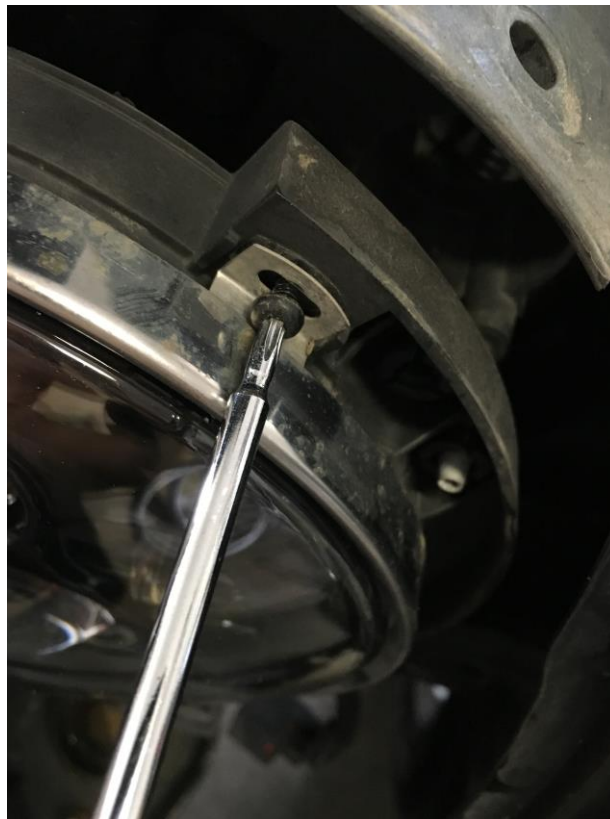

8. Install of the headlights is now complete, all that's left is to place the grille back onto the jeep.



9. Go back to step 2 and complete in the reverse order to reinstall the grille.
10. Close the Hood and the install of the new Raxiom led headlights is complete. (after photos)

