



Installation Instructions

Roll Bar Covers
for Jeep JK 2007 up
J2RBC07**

Tools Required:

10mm socket wrench.

(Optional Tools required if you would like to keep the factory roll bars in tact)

T45 hex wrench

Please read the instruction fully before you begin. The first step is to remove the old roll bar covers..

STEP 1

You will first remove the sound bar this is held on with 6 - bolts recessed into the sound bar. You will need a 10mm socket to do this. Once this is remove you will need to disconnect the power connection plug that is located on the passenger side of the sound bar.

IF YOU DO NOT WANT TO SAVE THE OLD ROLL BAR COVERS YOU MAY MOVE ON TO STEP #3


STEP 2(OPTIONAL)

The rear seat belt needs to be removed from the rear roll bar. A T45 HEX key will be required. You will need blue thread locker on the bolt to re-install after.

STEP 3


Unzip and remove all of the old roll bar covers. You need to cut off the covers around the rear seat belt if you chose not to remove the bolt holding the seat belt on. As you are removing the old covers some of the solid foam around the bars fall off or break off. This needs to be held back in place for the new covers to be installed. The easiest way is to wrap it in place with masking tape as shown.

Installation order

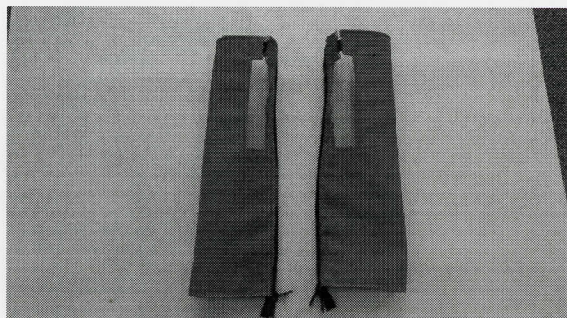


STEP 4

Install the cover on the B pillar (middle roll bar next to seat) first. If you have a soft top installed you will need to remove the soft top frame bars from bracket on the roll bar.

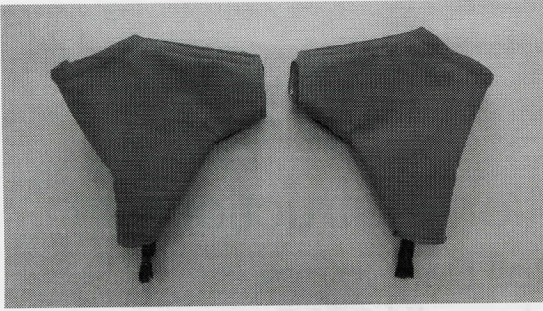


STEP 5

The pieces install at the top of the B pillar around the middle overhead roll bar. Zippers toward the back behind roll bar.

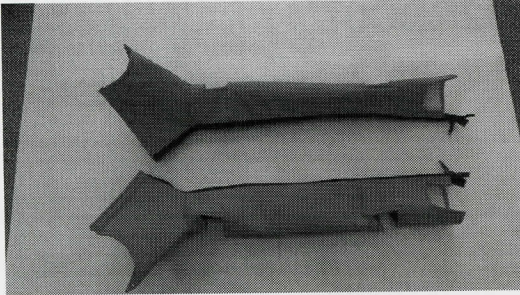

STEP 6

These pieces install on the front roll bar between the windshield and the middle roll bar.

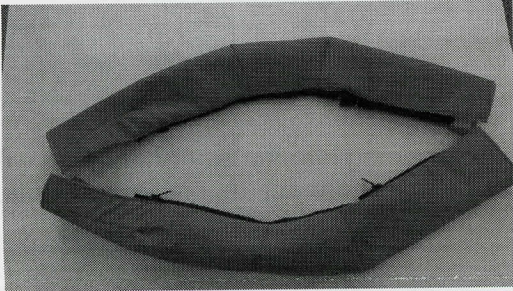

STEP 7

Final piece install on the rear section of roll bar

STEP 8

The sound bar re-installs in reverse order from the removal. Plug the power connection back in to the end of the sound bar. There are cuts outs on the new covers that allow the body clips and bolts to pass through. You will need to make sure these are aligned correctly. Loosely install all 6 bolts before tightening them up.

