

Installation Instructions

DESCRIPTION: GAS DOOR (LOCKING OR NON LOCKING)

Installation steps:

1. Install the Fuel hatch cover over the existing fuel filler trim. Make sure the door opens level.

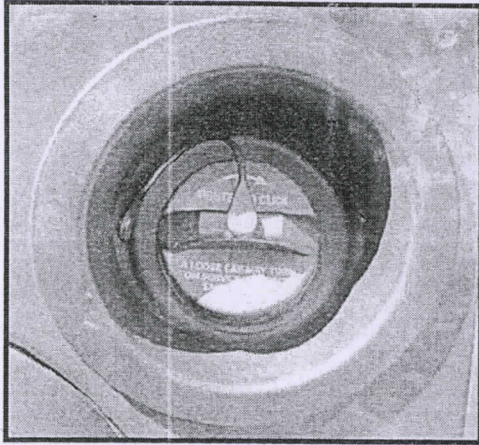


Figure 1a


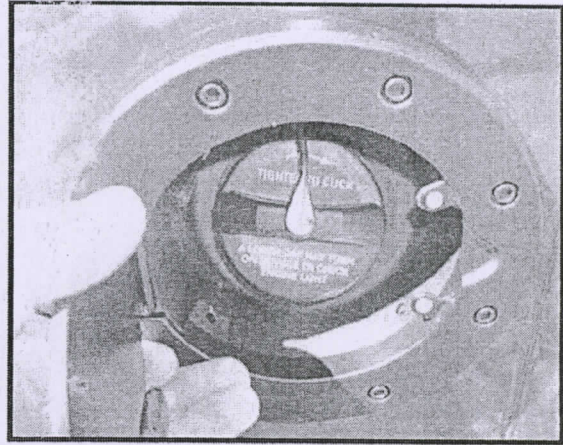


Figure 1b

2. Start one of the included screws applying force while turning. This will start the screw into the plastic. Working in an X pattern, start the remaining screws. Once all screws are started, tighten them in an X pattern.



3. Congratulations on the purchase and installation of a quality Rugged Ridge product!

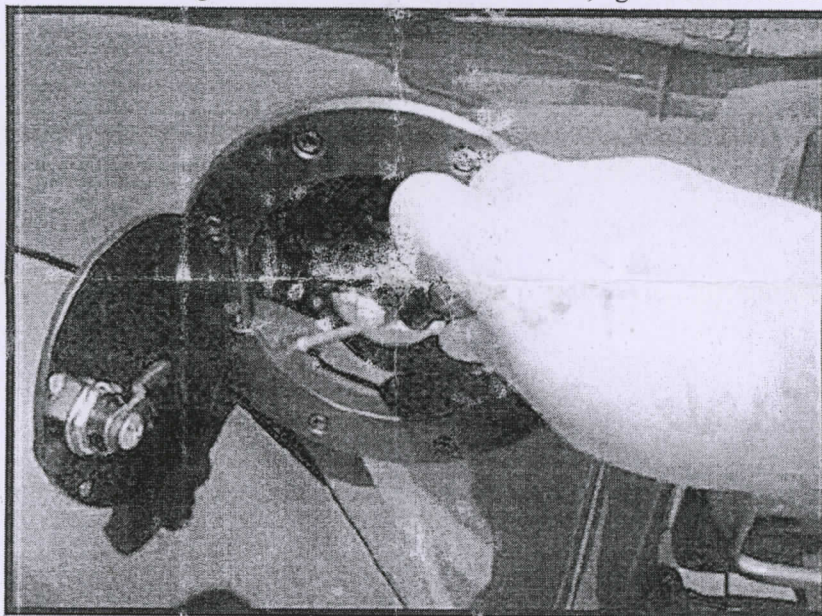