

## DV8 Off-Road Steel Rock Guard/Sliders

### Installation Guide for Jeep Wrangler 2-Door JK

**Installation Time:** Less Than One Hour

**Tools Required:**

- ✓ Box Cutter or Knife for Packaging
- ✓ 16mm Socket Wrench
- ✓ Socket Extension

*No instructions or hardware are included with this product's packaging.*

**Installation Instructions:**

1. Using a 16mm Socket Wrench, remove the two nuts (Figure B) near the wheel well along the front side of your Jeep on the driver's side (nuts shown in Figure A).

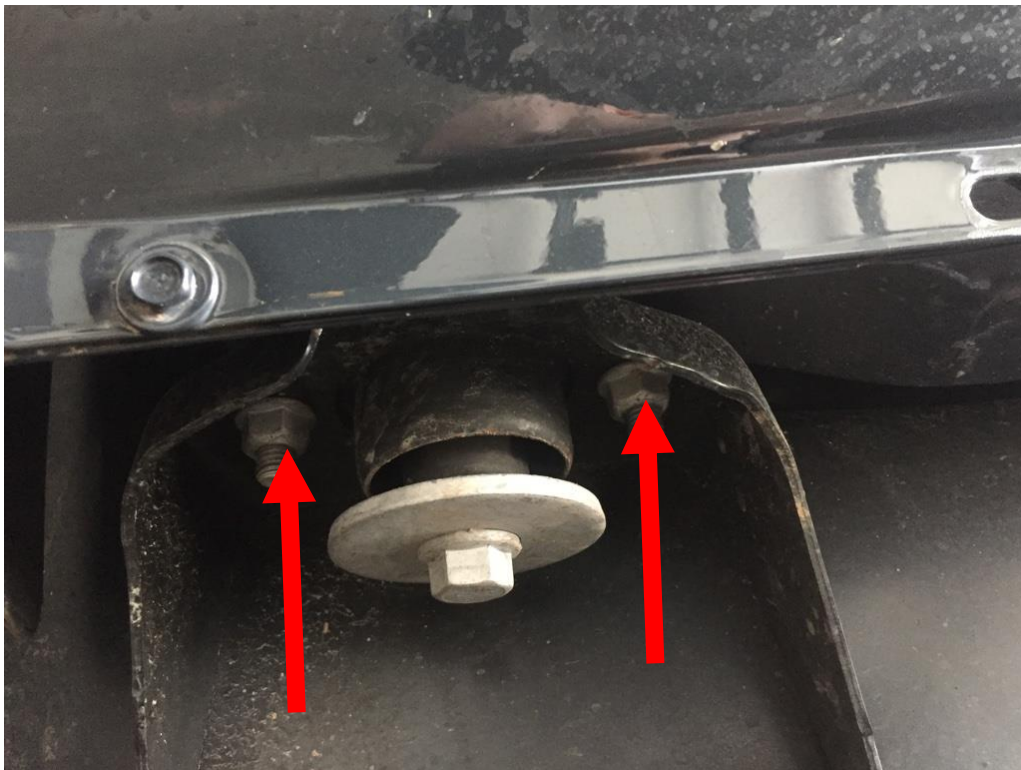


Figure A



Figure B

2. Once you've removed these nuts (Figure C), do the same at the rear side of the Jeep's driver's side. **Note: Be sure to keep these four nuts as you will need them to attach the rock guards later.**



Figure C

3. Align the rock guard at both the front and rear sections. **Note: Make sure you have the correct rock guard on each side of your Jeep. They will not come labeled so if the front side cannot clear the black metal surround shown in Figure C, use the other rock guard.**

4. The top end of the rock guard should slide under the black metal surround and above the large silver washer shown in Figure C. Once you've slid the rock guard into place on both the front and rear sections (Figure D), lift so that the two bolts protrude into the openings on the rock guard mounting area. **Note: Align both mounting areas in front and rear sections of Jeep before reattaching nuts.**



Figure D

5. Reattach nuts that were removed in Step 1 and hand-tighten (Figure E) for both the front and rear sections.



Figure E

6. Using an Extension for your Socket Wrench, tighten down nuts in the front and rear mounting sections using a 16mm Socket (Figure F). **Note: Be sure to go back and re-tighten all nuts after initially tightening down.**





Figure F

7. Repeat Steps 1-6 on the passenger side.

Before



After



Installation Instructions Written by ExtremeTerrain Customer J. Sandlin 02/22/2017