


Thanks for choosing a KC HiLITES product. We take pride in building the highest quality, best engineered systems possible. Your satisfaction with our product is important, so if you have any questions, please call our customer service line at 800-528-0950. For warranty information, visit our website at www.kchilites.com.

Parts Included


- 1 - FLEX LED Light Bar (10", 20" or 30")
- 1 - Wiring Harness Kit
- 1 - Set Mounting Brackets w/Hardware
- 1 - Power Cable

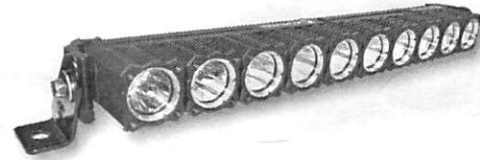

PLEASE NOTE - This light bar is for OFF ROAD USE ONLY


MOUNTING YOUR LIGHT

- The bar may be installed using the brackets included or on one of our universal mount brackets (#73262 or #73263 purchased separately) that allow mounting on many different light tab configurations. If using the supplied brackets, choose one of the three holes on the bracket and lightly tighten one on each end of the bar.
- Choose a location on your bumper or other flat surface for mounting your bar. Measure the distance between mounting bracket holes and mark carefully. Now drill a 1/2" hole for each bracket. Install the bar with the bolts and nuts supplied and tighten securely.
- Attach the power cable. The red positive wire can attach to any of the posts marked (+) and the black negative wire to any of the bolts marked (-).

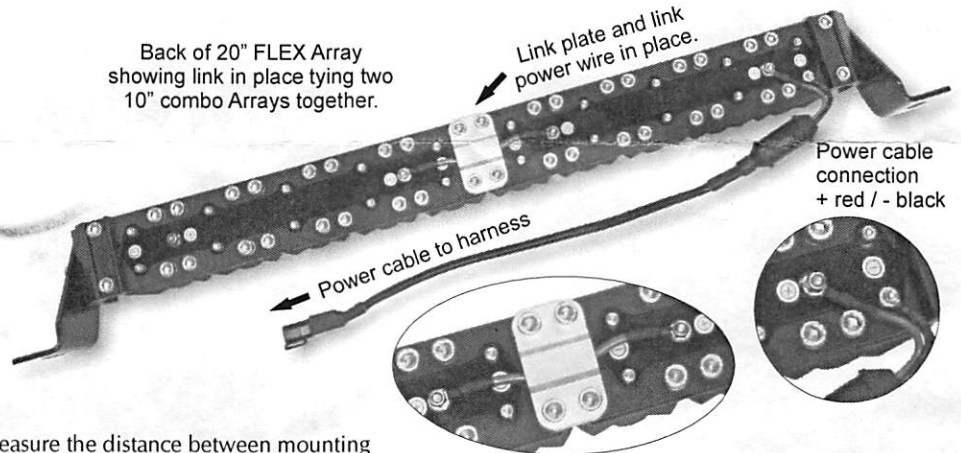

WIRING YOUR LIGHTS

- Remove the fuse from the harness. Attach the harness wire to the light. Route the harness toward the 12V battery/power source and mount the relay using the supplied sheet metal screw. Attach the negative (black) wire to a good chassis ground and power (red) wire to a positive 12 volt power source.
- Find a suitable location inside the passenger compartment for your switch. Mark and drill two 1/8" holes, insert screws and loosely install the panel to ensure fit. Remove panel, install switch, and slide panel with switch, back in place. (Do not tighten. The panel and switch will be removed when attaching wires.)
- Continue routing harness through the firewall to the inside of the vehicle toward the switch and panel previously installed. **If you are unable to find an existing hole in the firewall, it may be necessary to cut a 1/2" hole for the switch terminals to pass through.** Once the wires are inside the vehicle near the switch, remove the panel with switch and attach the **blue** wire to the switch terminal marked **LOAD**. Attach the **white** wire to the switch terminal marked **SUPPLY**. Attach the **black** wire to the switch terminal marked **EARTH**. Re-attach the panel with switch and tighten screws.
- Ensure the switch is in the **OFF** position (as illustrated to the right), then re-install the fuse.

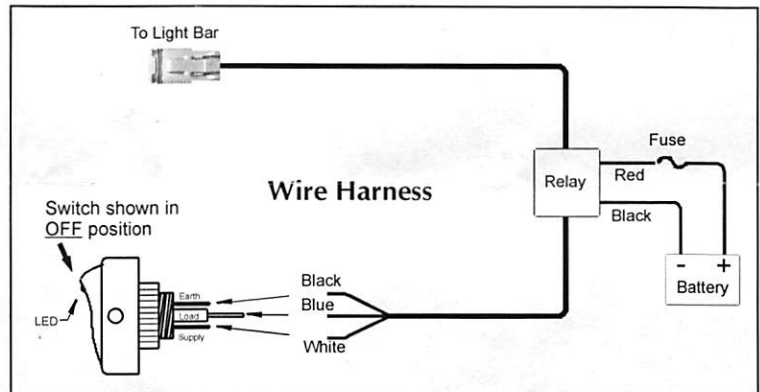

AIMING YOUR LIGHTS

- Since this light bar is not legal on any public road or highway, aiming is entirely up to you. Most prefer the beam as far down the road as possible, others adjust it slightly down to illuminate more area close to the vehicle.
- After aiming the bar to your preference, tighten all hardware.

YOU'RE DONE

To see other configurations and/or add additional FLEX LED lights and accessories, visit our website at - www.kchilites.com