






Part #12034.13

460 HORIZON DR. SUITE 400 | SUWANEE, GA 30024 | PHONE: 770-614-6101 | FAX: 770-614-6069 | info@omix-ada.com

# **LED Inserts for Spartan Grille**

#### Components

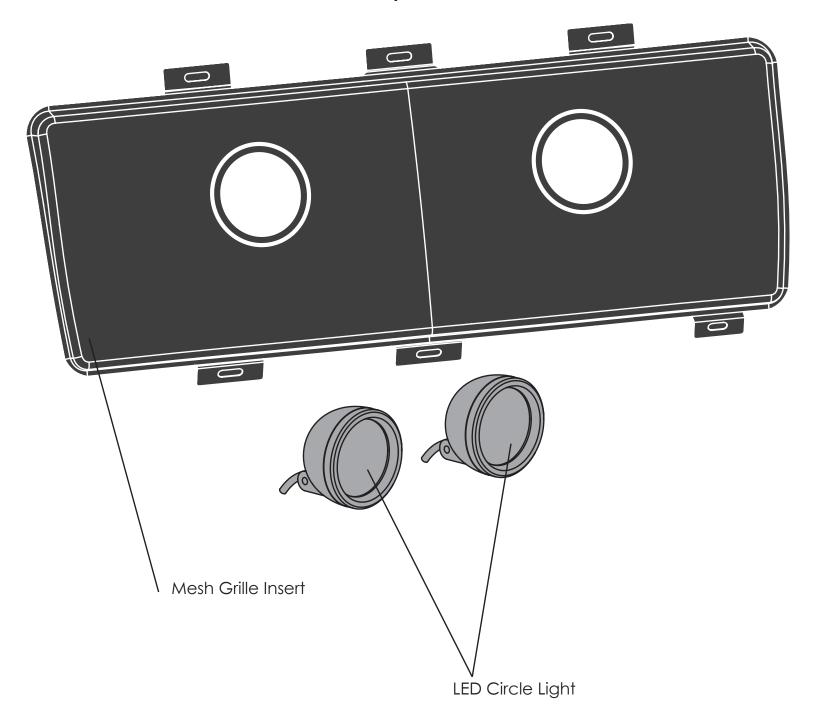









460 HORIZON DR. SUITE 400 | SUWANEE, GA 30024 | PHONE: 770-614-6101 | FAX: 770-614-6069 | info@omix-ada.com

# **LED Inserts for Spartan Grille**


1. Remove Spartan Grille from vehicle. Refer to instructions included with grille for removal.

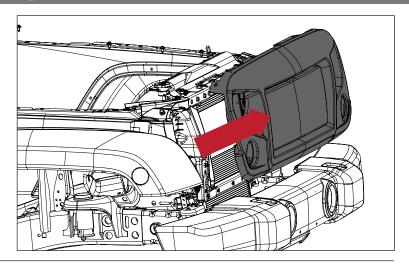

2. Remove highlighted M6 fasteners from rear of Spartan Grille. They will be reused for installing the LED insert. Remove mesh insert.

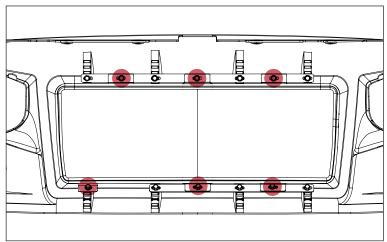

3. Install new grille insert using the M6 hardware from the previous step.

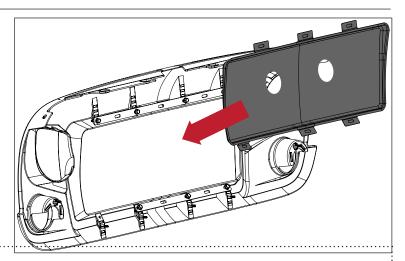

#### **OMIX-ADA® TECHNICAL SUPPORT**

PHONE: M-F 8am - 5pm EST 1-800-449-6649 | EMAIL: techsupport@omix-ada.com

FOR WARRANTY INFORMATION VISIT: www.Omix-Ada.com








460 HORIZON DR. SUITE 400 | SUWANEE, GA 30024 | PHONE: 770-614-6101 | FAX: 770-614-6069 | info@omix-ada.com

### **LED Inserts for Spartan Grille**

4. Install LED Circle Lights to each bracket on rear of mesh grille insert with supplied bolts, washers, and nuts. Adjust light to proper angle as needed.

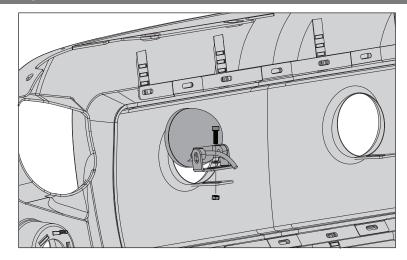

- 5. Wire lights to vehicle.
- 6. Reinstall Spartan Grille. Refer to instructions included with the grille for installation.

