

Tools Needed:

- Flat Head Screw Driver
- Drill & Drill Bits
- Socket and Wrench Set
- Tape Measure

Installation Instructions for Raxiom Grille Mount LED Lights



Step 1:

Access the connectors on the rear of the turn signals from the wheel wells. The turn signal clips have a red locking tab, slide the locking tab out, then depress the clip to remove the signal plug.




Step 3:

Using the supplied 1/4" bolts, washers, and nuts, install the lower end brackets onto the lower center light bracket.



Step 2:

Next, raise the hood to gain access to the (6) plastic push clips securing the factory grille to the vehicle. Using a trim removal tool, remove the (6) clips. Then firmly pull on the bottom of the grille to remove the grille from the vehicle.

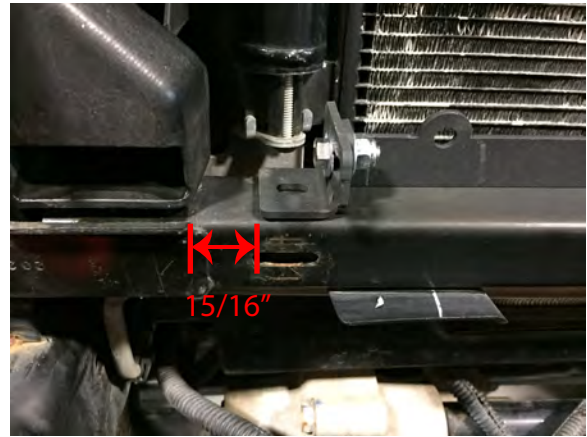

Step 4:

Measure 15/16" from the frame rail tab to the outside of the lower end bracket. This will center the lower light bracket in the grille surround.



Step 5:
With the brackets centered on the radiator support, mark the location and drill a 9/32" hole through the lower radiator support.



Step 7:
Remove the wire loom clips from the upper radiator support.



Step 6:
Loosely attached the lower light bracket using the supplied 1/4" bolt, washers, and nuts.




Step 8:
If necessary, carefully drill the existing upper radiator support holes to 9/32".
****Note:** Place a block of wood behind the holes will prevent you from accidentally piercing the A/C condenser with the drill bit.



Step 9:
Loosely install the upper end brackets using the supplied 1/4" bolts, washers, and nuts. The extra hole faces down, this is where you will reclip the factory wiring harness.



Step 11:
Turn on the lights and adjust them as desired. Then tighten any and all loose bolts.

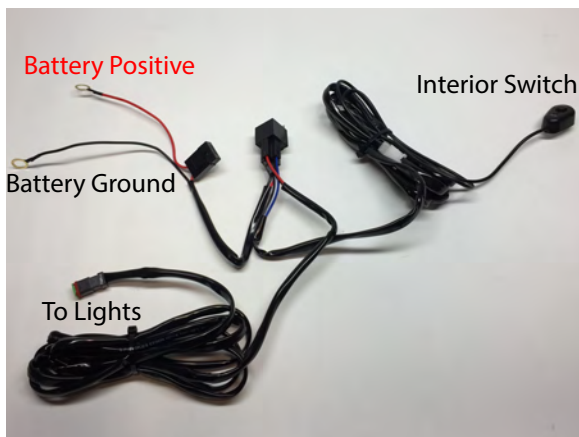

Step 10:
Connect the supplied wiring harness to the LED lights. Connect the red eyelet to the positive battery terminal, and the black eyelet to the Negative terminal. Run the on/off switch to the passenger compartment using a suitable body grommet or by drilling your own hole. Zip tie the excess wire away from heat and moving parts.



Step 12:
Reinstall the grille using the factory clips, making sure to reconnect the turn signals.