


DELTA

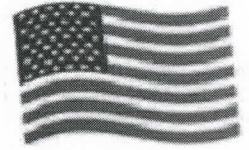

Made in USA



JEEP JK BUMPER REF LED DRIVING & FOG LIGHTS

Part # 01-3039-LED2, 01-3086-LED2 & 3088 Series

INSTALLATION INSTRUCTIONS

1. Disconnect factory fog lights and separate from factory harness.
2. Remove 4 bolts securing bumper to the vehicle and separate from the vehicle. Lay it face down on a soft surface.
3. Remove the factory fog lamps held by 4 screws.
4. Install Delta lights using mounting brackets and hardware (supplied).
5. Reinstall bumper.
6. Connect Delta LED lights to factory harness 2007-2009. For *models 2010 and beyond use 9005 / H16 adapter (supplied)*
7. Test your lights to ensure proper operation.

Enjoy near daylight visibility and 75% energy saving!

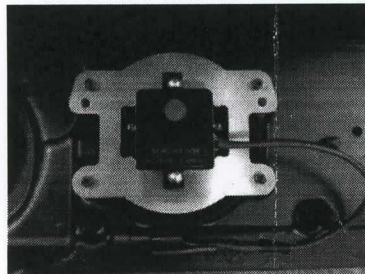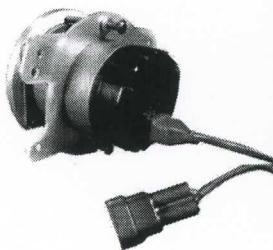

CONTENT: Two LED lights, two billet aluminum rings, and mounting plates, two 9005 / H16 adapters and mounting hardware.

DELTA TECH INDUSTRIES, LLC - Ontario, CA 91761 U.S.A.
Web: www.deltalights.com Phone: 909-673-1900 E-mail: tech@deltalights.com