



270524B, 270524BL
64178, 64178L

2007+ Jeep Wrangler Grille Installation Instructions

Congratulations on your purchase of a high quality PUTCO product. Should you need any application or technical assistance, feel free to call us at: 1-800-357-9261
Monday-Friday 8:00 a.m. - 5:00 p.m. (Central Standard Time)
Contact your PUTCO dealer for other quality accessories.

Please read all instructions before installation and to check to see that all parts are included.


KIT CONTENTS:	
Description	Qty.
Grille (Stainless Steel or Aluminum)	1
1/4" - 20 x 3/4" SS bolt	20
1/4" - 20 SS Lock Nut	20
1/4" SS Washer	20
Only for Lighted Grille (below)	
20" Luminix Light	1
Wiring Harness	1
Switch	1
Light Bar Installation Instructions	1

Tools Needed:

- 7/16" Wrench
- 5/32" Hex Wrench
- 5/16" Drill Bit
- Drill
- Flat Head Screw Driver
- Saw- Recommended:
Oscillating Hand Tool

Grille Installation

1. Remove Grille from packaging. Check to see if all parts from above table of kit contents are included.

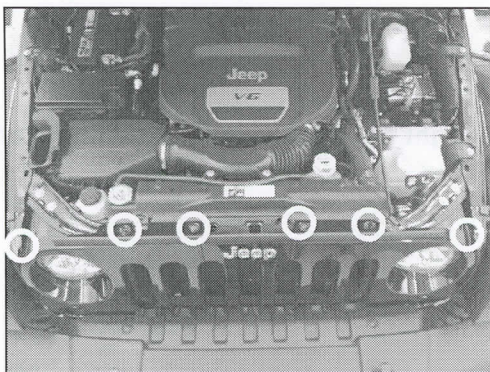

2. Remove 6 plastic retaining clips with flat head screw driver (locations shown above) by removing center rivet pin first.




3. Once clips are removed, remove grille by pulling straight out and unhooking the marker lights.

LIMITED 90 DAY WARRANTY

Putco guarantees its Stainless Steel and Aluminum products against defects in workmanship and material for as long as you own your vehicle. All painted products have a 90 day warranty on the painted surface. Any defects resulting from faulty material or workmanship will be warranted by Putco and repaired or replaced at our discretion. Putco assumes no extra labor costs. Damages caused by freight carriers, improper installation, misuse, collision, or neglect will not be warranted by Putco.

4. Use saw to cut inner section of grille out. Mark 3.25" from top and bottom, these will be your cut lines. Only inner bars will be removed. (**Recommend using tape around cut line**) (white shaded area below).

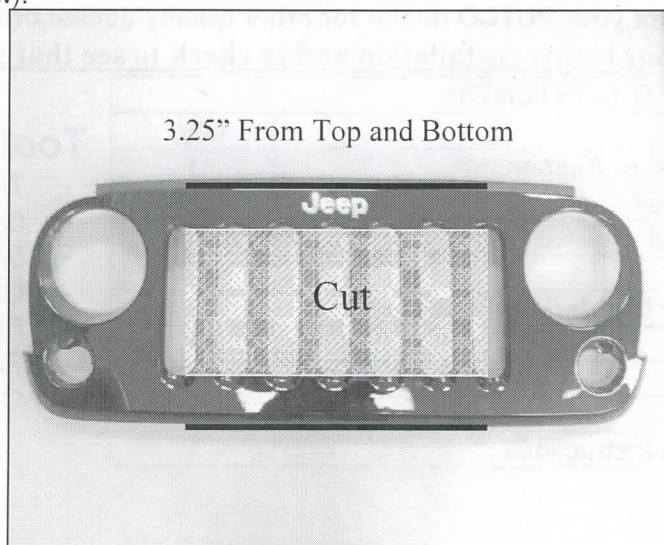

5. Place Putco grille over cut jeep grille. Align notch in top of grille with the "P" in the Jeep logo. Measure grille side to side and up and down to verify it is set on the Jeep grille square. Mark and drill all 20 holes around border of Putco grille. Use 5/16" drill bit.
6. Bolt Putco grille to Jeep grille using 1/4"-20 hardware; washer and nut goes on back side of grille. Use 7/16" wrench and 5/32" hex wrench to tighten hardware.
7. Reinstall grille shell into Jeep. Enjoy!!

For Lighted grilles, refer to the Wiring Installation on Light Bar Installation Instructions for wiring instructions

LIMITED 90 DAY WARRANTY

Putco guarantees its Stainless Steel and Aluminum products against defects in workmanship and material for as long as you own your vehicle. All painted products have a 90 day warranty on the painted surface. Any defects resulting from faulty material or workmanship will be warranted by Putco and repaired or replaced at our discretion. Putco assumes no extra labor costs. Damages caused by freight carriers, improper installation, misuse, collision, or neglect will not be warranted by Putco.