

IMPORTANT!!!

DO NOT DISCARD YOUR BOX UNTIL YOU HAVE VERIFIED THAT ALL OF THE PARTS AND FASTENERS ARE ENCLOSED. SEE COMPONENT LIST AND ASSEMBLY INSTRUCTIONS.


IN THE UNLIKELY EVENT THAT SOMETHING IS MISSING, PLEASE CALL 916-638-8703 X 210 AND WE WILL BE HAPPY TO SEND YOU WHAT YOU NEED. **HOWEVER, IN ORDER TO OBTAIN MISSING PARTS, YOU WILL BE ASKED TO PROVIDE US THE FOLLOWING:**

1. **THE PART NUMBER OF THE KIT YOU HAVE PURCHASED.** This is on the yellow label on the outside of the box.
2. **THE PRODUCTION DATE OF THE KIT.** This is on the yellow label on the outside of the box.
3. **THE CERTIFIED WEIGHT OF THE KIT AND THE "INSPECTED BY" NUMBER.** This is on a white label next to the yellow label.
4. **THE "INSPECTED BY" NUMBER OF THE COMPONENT INSPECTOR.** This is on the component parts list inside the box.


KARGO MASTER®

SAFARI

60260 Parts List

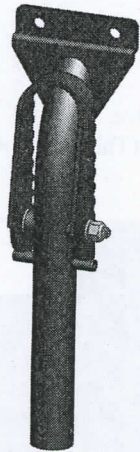

60260-12 (2x)

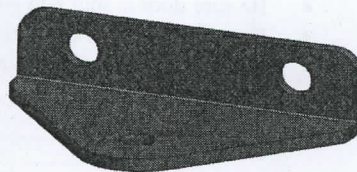

60260-00-002 (2x)




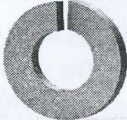


60260-00-004 (4x)

60260 Hardware List

Tools Needed

M5 Hex
TORX 50 Drive

Hardware Pack

(A) QTY - 10 M8 x 30 Button Head 	(C) QTY - 10 M8 Split Lock Washer 
(B) QTY - 10 M8 Flat Washer 	(D) QTY - 4 Rubber Stop 

For TECHNICAL SUPPORT Call: 800-343-7486 Monday - Friday 7:00 A.M. to 4:00 P.M (PST)



KARGO MASTER[®]

SAFARI

60260 Installation Instructions

Step 1

- Insert rubber bumpers (9309K16) into both sides of each 60260-12 assembly.

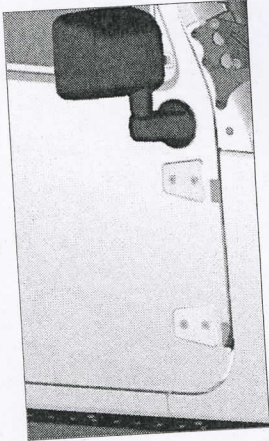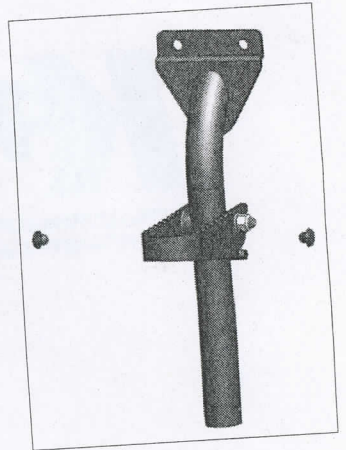


Step 2

- Be sure door is shut and latched.
- Remove top two TORX bolts using a T50 drive.
- Leave bottom hinge bolts attached and tight. (This is so you do not have to re-align door)



Step 3

- Install step assembly (60260-12) in position of previously removed bolts.
- Bolt to door using two M8 x 30mm button head bolts, two M8 split lock washers and two M8 flat washers.
- If desired, place protective piece between step and door.
- Tighten Bolts

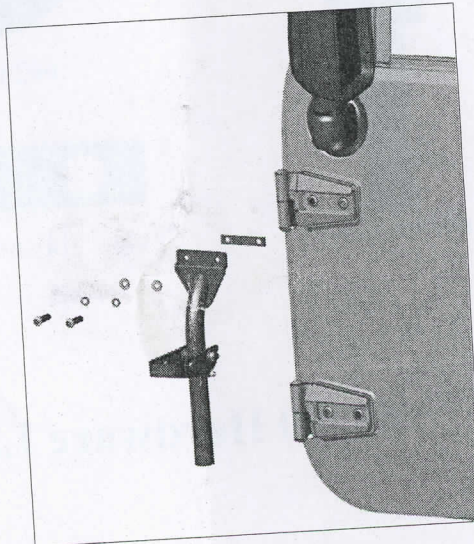

Step 4

- Remove bottom two TORX bolts from door hinge using a T50 drive.
- Bolt bottom support (60260-00-002) to door hinge in the same location of previously removed bolts. Use two M8 x 30mm button head bolts, two M8 split lock washers and two M8 flat washers.
- If desired, place protective piece between step and door.
- Do not tighten.

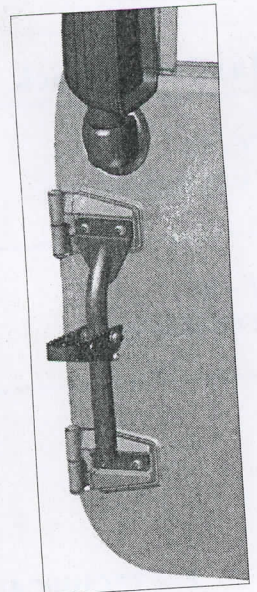
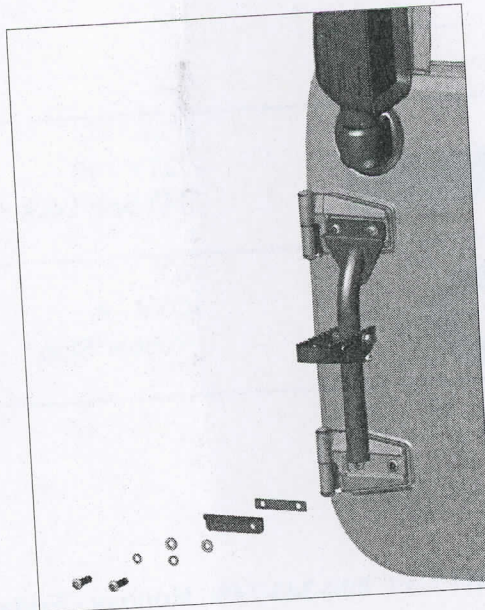


Step 5

- Bolt bottom support (60260-00-002) to step assembly (60260-12) using one M8 x 30mm button head bolt, one M8 split lock washer and one M8 flat washer.
- Snug Tighten

Step 6

- Tighten bolts from step 4 into door hinge.
- Tighten bolt from step 5.
- Repeat on passenger side.

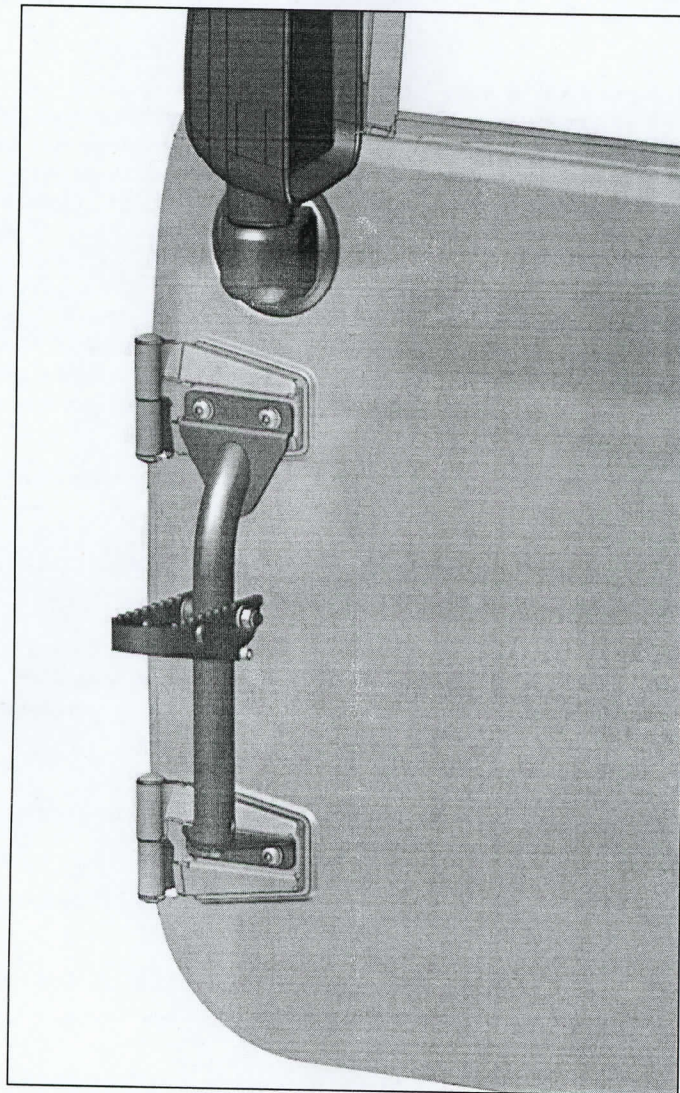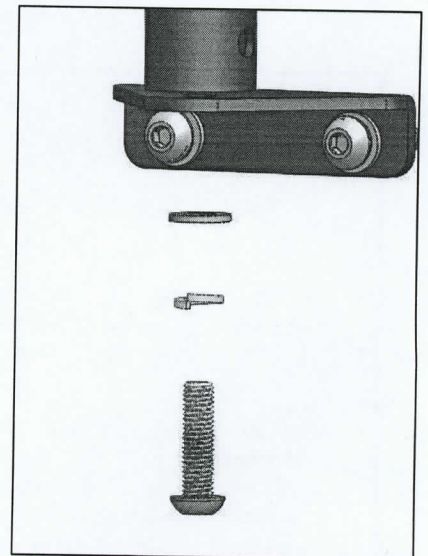

Your installation is now complete.

For TECHNICAL SUPPORT Call: 800-343-7486 Monday - Friday 7:00 A.M. to 4:00 P.M (PST)