




Step 1\\

Using a panel removal tool, remove the (6) push clips holding the grille cover to the vehicle. Unplug the turn signals and pull the grille cover from the vehicle.



Step 2\\

Remove the factory turn signals by unclipping them from the factory grille. Transfer them to the new grille.

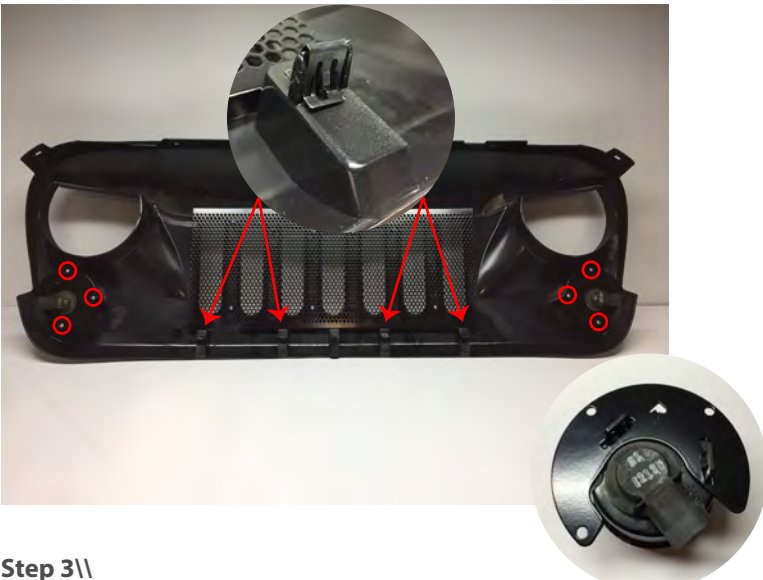

Step 3\\

Press on the (4) supplied retaining clips. Install the turn signals into the provided brackets and then secure the brackets the grille using the supplied screws. Using the factory grille as a reference, apply the supplied weather stripping across the top of the grille.



Step 4\\

Reinstall the grille using the factory push clips.