


Step 1\\

Open the tailgate to access the 3rd brake light connector. Remove the vent cover with a panel removal tool. Unclip the brake light wiring harness. Reinstall the vent cover. Close the tailgate.

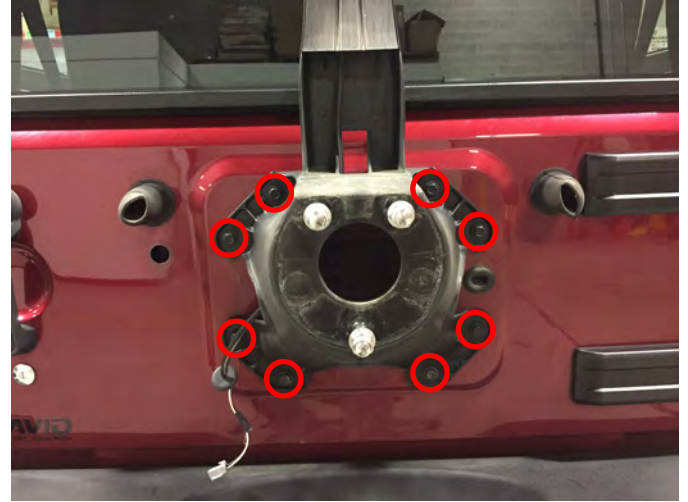

Step 2\\

Remove the spare tire from the vehicle. Remove the (8) 13mm bolts holding the factory tire carrier in place. Remove the 3rd brake light wiring grommet and remove the harness and plug from the vehicle.



Step 3\\

Remove the tailgate vent and grommet from the vehicle.



Step 4\\

Install the tailgate vent plate using the factory bolts.