

AXIAL

Tools Needed:

- Phillips Head Screw Driver
- Pliers

Installation Instructions for LED Tail Lights

Step 1:

Begin by removing the negative battery terminal. Remove the (2) Phillips head screws from the factory tail light.




Step 2:

Disconnect the tail light plug and then remove the light from the vehicle.



Step 3:

Install the resistor to the mounting bracket using the supplied bolts and lock washers. Install the clips on the resistor brackets.

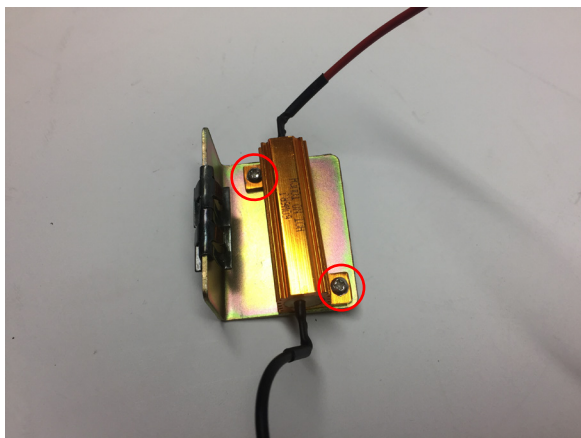

Step 4:

Press the resistor mounting bracket onto the sheet metal. Press the clip onto the sheet metal behind the tail light, the pressure of the clip holds the bracket in place.



Step 5:

Reconnect the chassis harness plug to LED tail light. Ensure the circled tabs are located behind the vehicle's sheet metal before installing the factory screws. ****Fitment Note:** Some vehicles will require you to gently pull the sheet metal outward (along the dashed line) in order to engage the tail light tabs. Gently pull a little at a time until the tabs engage the tail light. This will ensure the tail light fits tight and doesn't rattle. Then Reconnect the battery terminal and ensure the tail light functions properly.

