



## Smoked / Clear LED Turn Signals (07-18 JK)



### Step 1\\

Access the connectors on the rear of the turn signals from the wheel well. The turn signal clips have a red locking tab, first slide the locking tab out. Then depress the clip to remove the signal plug.



### Step 2\\

Using a panel removal tool, remove the (6) push clips holding the grille cover to the vehicle. Unplug the turn signals and pull the grille cover from the vehicle.




### Step 3\\

Remove the factory turn signals by unclipping them from the factory grille.




### Step 4\\

Mount the resistor to the frame using the supplied adhesive. **\*\*Note:** The ballast will get hot. Keep away from anything that may cause damage.

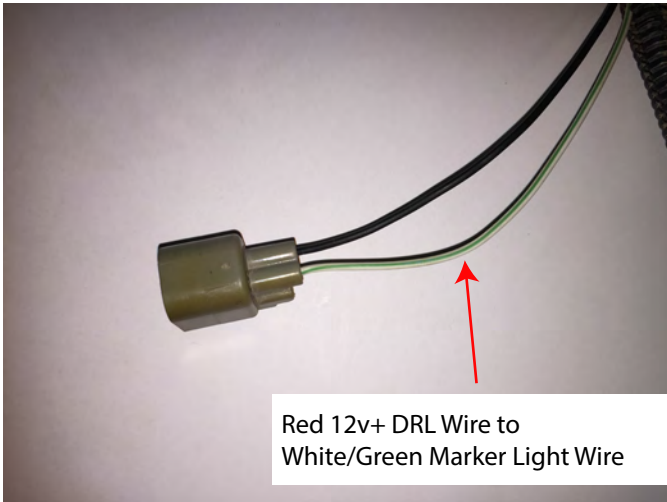

**Step 5\**

Locate the front side marker light wiring harness. Run the red 12v+ wire from the turn signal light, and splice into the white/green marker light wire.

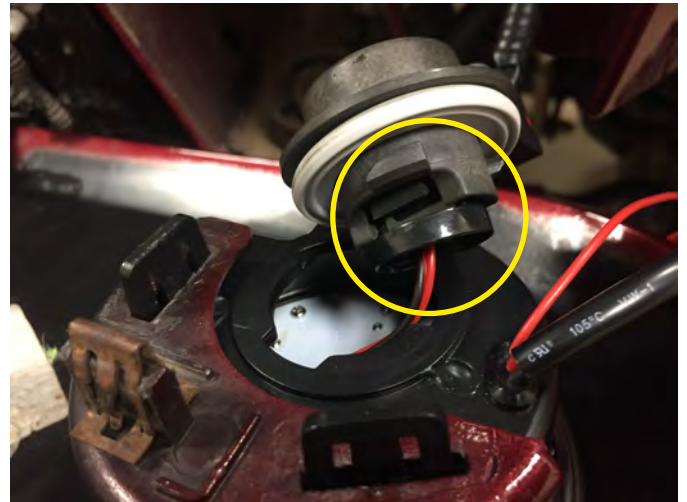

**Step 6\**

Connect the LED turn signal harness into the factory turn signal socket. Twist the socket clockwise to tighten.



**Step 7\**

Test the lights before completion. Reinstall the grille.