

RAXIOM

LED Side Marker (07-18 JK)




Step 1
Using a panel removal tool, remove the (2) push clips holding the inner splash shield.




Step 2
Using a small Phillips head screwdriver, firmly press the center out of the (2) push pins circled above. Then use a panel removal tool to remove the remaining fastener.



Step 3
Fold the splash shield out of the way to access the marker light plug. Unplug the light and tuck the wiring harness out of the way.

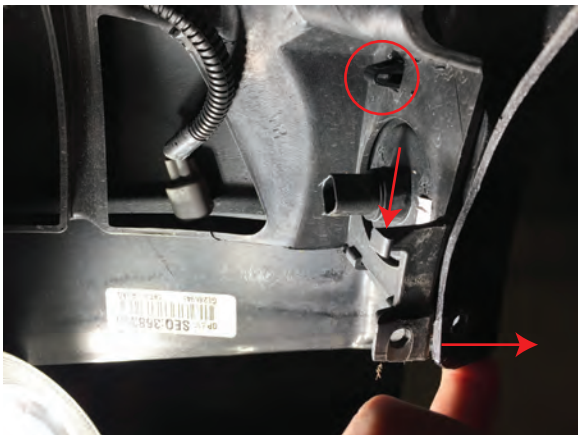

Step 4
Depress the upper marker light clip to release it from the inner fender. Press the marker light down to release the light's lower clips from the inner fender. Gently pull the outer fender away from the inner fender to remove the light from the car.

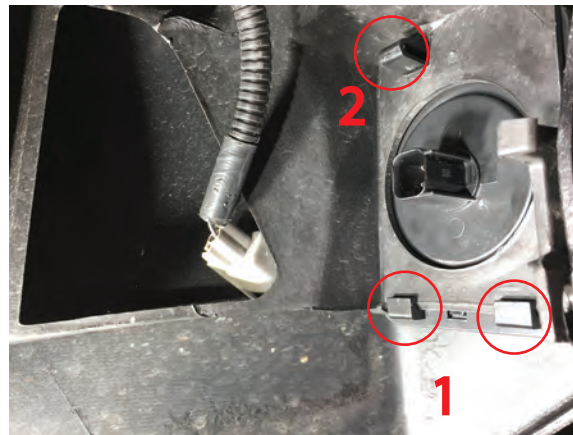

Step 5
Install the Raxiom LED marker light, ensure the bottom of the light clips onto the inner fender(1) before the upper clip gets pressed in(2).



Step 6
Reinstall the fender liner and push clips in reverse order.