

**Contents:**

- (1) Spare Tire Delete
- (1) License Plate Mount
- (4) Rubber Grommets
- (4) M5x0.8x15mm Screws
- (4) M5 Flat Washers
- (4) M5 Lock Nuts

**TOOLS REQUIRED:**

- 13mm Sockets
- Ratchet
- T40 Torx Bit
- Trim Panel Removal Tool
- Clean Towel
- Cleaning Solution

## Spare Tire Delete w/ License Plate Mount (18+ JL)

**STEP 1 //**

Locate the T40 torx lock screw on the camera cover, and turn it counter clockwise to unlock. Remove the camera cover by pulling away from the vehicle.

**STEP 3 //**

Locate, and unplug the (3) wire connections.

**STEP 2 //**

Using a trim panel removal tool, carefully pry the plastic tailgate cover off. Remove cover.

**STEP 4 //**

Carefully remove the wiring and grommet from the vehicle. Locate, and remove the (8) 13mm bolts holding the tire carrier secure. Remove tire carrier. \*\* Note factory hardware will be reused.




### **STEP 5 //**

Remove the (3) remaining grommets by simply pulling them away from the vehicle. Using a clean towel and cleaning solution, clean the back tailgate where the spare tire was located.



### **STEP 7 //**

Install the spare tire delete w/ license plate mount to the vehicle using the (8) 13mm factory bolts. Torque to 40 ft-lbs. Installation is complete.

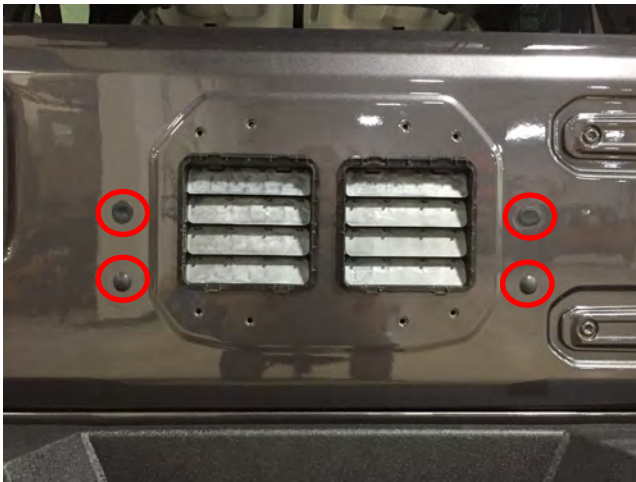

### **STEP 6 //**

Insert the supplied (4) rubber grommets into the tailgate by simply pushing them into the vehicle.