



Jeep Wrangler JK (2007-2018) Fender Flares (Front & Rear)

Contents:

- (2) - Front Fenders
- (2) - Rear Fenders
- (1) - Hardware Kit
- (4) - Foam Strips

Tools Required:

- Flat Blade Screw Driver
- Socket Set
- Drill and Drill Bits


Front Fender Install:



Begin by removing the factory fender liners, there are (5) 10mm bolts. Remove the factory marker light harness from the light and zip tie it out of the way. Remove the factory fender by firmly pulling it away from the vehicle. Start from the front of the fender and work towards the rear. The factory clips will most likely break, the clips will not be reused.



Install the supplied foam on the back side of the fenders as seen above.

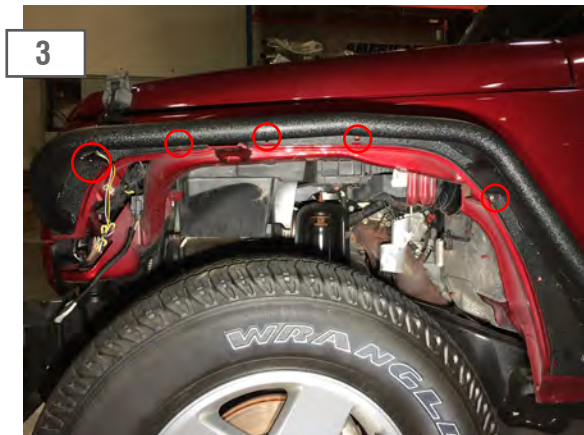

Install the Barricade Flat Fenders using the supplied M8x1.25 25mm long Allen bolts, install the forward most (5) bolts first. ****Note:** Loosely install all hardware before fully tightening bolts to ensure proper bolt hole alignment.



Clearly mark the holes for drilling. Remove the fender for ease of drilling. Using an 11/32" drill bit, carefully drill the (2) rear most holes on the front fenders. ****Note:** Keep the drill level, drill through both the outer and inner fender.



Install the supplied spacers between the inner and outer fenders using the M8x1.25 120mm bolt for the long spacer and the M8x1.25 65mm bolt for the shorter spacer.

Rear Fender Install:

1



Using a flat head screw driver, remove the (5) push clips holding the rear fender liner to the vehicle. Then firmly pull the stock fender away from the vehicle moving from front to back. The factory clips will most likely break, the clips will not be reused.

2



Install the supplied rivnuts in the (8) holes circled above. Begin by drilling the rivnut holes to 23/64".

3



Using the supplied handle and long M6x1.0 install the rivnuts. Hold the rivnut in place with the handle and tighten the rivnut securing it to the vehicle. ****Note: Rivnuts are more susceptible to stripping, Do not over tighten them.**

4



Install the supplied foam to the fender before installation.

5



Install the M6x1.00 25mm bolts with the supplied washer and lock washer on all locations with the installed rivnuts.