




## **Installation Instructions**

Part # J126500 (97-06 TJ)  
Cloak Extended Mesh Top

Please read instructions entirely first before installing this product. For best results install when temperature is above 70 degrees.

Part	Qty
Cloak Top	1
Long Cords	10
Short Cords	1

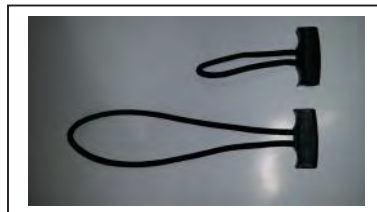

**Step 1:** If Equipped remove hard top or lower soft top. This Cloak top is designed to work and stay on with either the hard top or soft top installed.

**Step 2:** Lay Cloak top loosely on top of vehicle (Fig A). The end with only 3 grommet holes goes towards the front of the vehicle. (Actual vehicle may vary)

**Step 3:** Fasten the front center hole to the footman loop on the windshield frame using one the short bungee cord. (Fig B)



(Fig A)



(Fig B)

**Step 4:** Fasten the rear corners now using the long cords, and then proceed to fasten the front corners. (Fig C, D)



## **Installation Instructions**

Part # J126500 (97-06 TJ)  
Cloak Extended Mesh Top



(Fig C)



(Fig D)




(Fig E)

**Step 5:** Once the front and rear corners are all fastened proceed to fasten remaining points using the long cards. (Fig E) It is recommended to alternate from side to side when doing so.

**Note:** The handle on the cord is best placed when on the inside of the vehicle.

- A. Slide the cord through the grommet in the top. ( Fig F)
- B. Pull the cord around the sport bar. ( Fig G)
- C. Wrap the cord around the handle (Fig H)

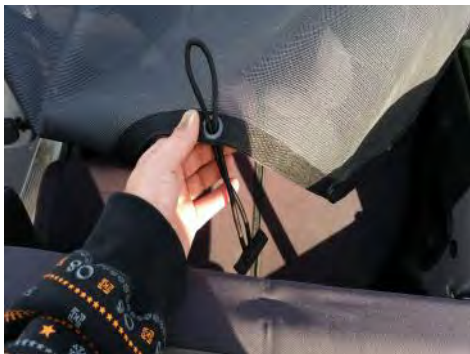

(Fig F)



(Fig G)



(Fig H)

**Step 6:** Installation is now complete. (Fig I,) Make any necessary adjustments on top if needed.



## ***Installation Instructions***

Part # J126500 (97-06 TJ)  
Cloak Extended Mesh Top



(Fig 1)

### **Note:**

Make sure not to interfere with any seat belt operation  
Use caution when installing cords, because of tension.  
Cords can be manipulated/through around plastic shrouds and door surrounds.  
The two holes on top are to allow freedom top installation.