



Installation Instructions
Cloak Sides and Rear
Part#J126501, J126502, J126503

Please read instructions entirely first before installing this product. For best results install when temperature is above 70 degrees.





Images are for illustration, actual product will vary on year and model.

Step 1: If Equipped, remove hard top or lower soft top, this makes the install easier. This Cloak top is designed to work and stay on with either the hard top or soft top installed. Note: sides need to be installed on the inside of the bow assembly.

Step 2: Lay Cloak panel loosely on rear of vehicle. Start at the corners and attach cloak top to roll bar using the cords. Adjust to desired position. Fig 4+5. See last page for cord locations

Note: The handle on the cord is best placed when on the inside of the vehicle. Slide the cord through the grommet in the top. (Fig 1)
Pull the cord around the sport bar. (Fig 2)
Wrap the cord around the handle (Fig 3)

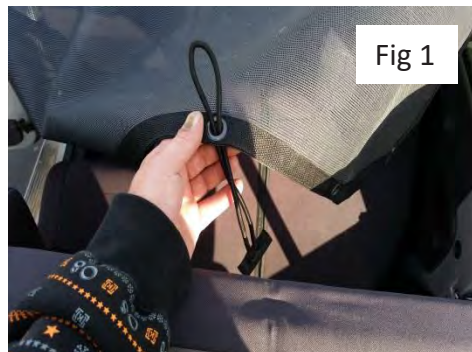

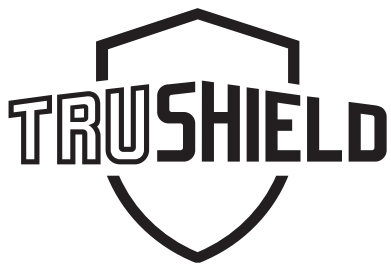


Installation Instructions

Cloak Sides and Rear

Part#J126501, J126502, J126503

Fig 4

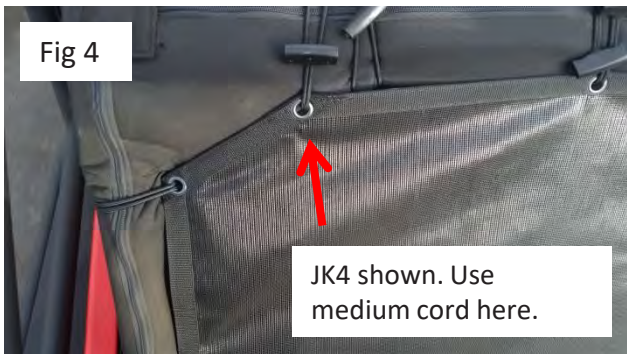


Note: Bungee cords are designed to work with the roll bar padding in place.

Step 3: Once the top and bottom corners are all fastened proceed to fasten remaining points. It is recommended to alternate from side to side when doing so.

Step 4: Install side pieces. Start with the top corners, then go across top next work your way down the sides. Fig 6. JK2 and TJ will mount entirely to roll bar. JK4, the front bottom strap will attach under carpet.


JK2 shown, TJ install will be similar.

Fig 5

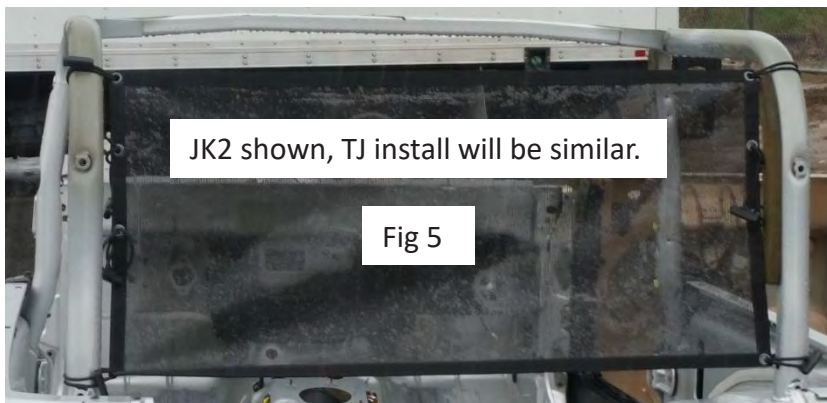

JK2 shown.

Fig 6

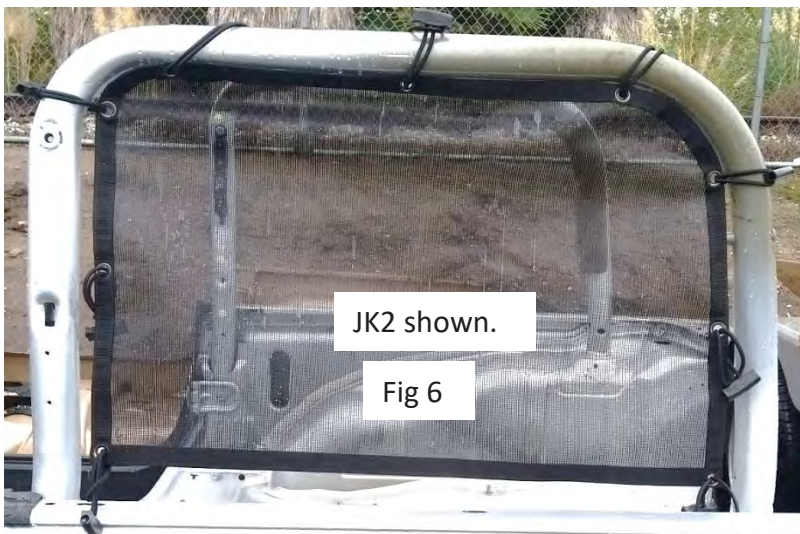



Installation Instructions
Cloak Sides and Rear
Part#J126501, J126502, J126503

Step 5: JK4 only. The front bottom strap for the side pieces will attach behind the rear door striker. To attach, pull back carpet to expose backside of door striker. Use long cord to loop around opening. Replace carpet. If desired, make a small cut in the carpet to allow carpet to form around cord. Fig 7

Step 6: JK4 only. The rear bottom strap will install right above seat belt cover. The mesh side will be at a slight angle when properly installed. Fig 8+9



Fig 7



Fig 8

JK4 installed above seat belt cover




Fig 9

JK4 installed into hole in body tub.

Step 7: Installation is now complete. Make any necessary adjustments on panels if needed.

Note:

- Make sure not to interfere with any seat belt operation
- Use caution when installing cords, because of tension.
- Cords can be manipulated through /around plastic shrouds and door surrounds.

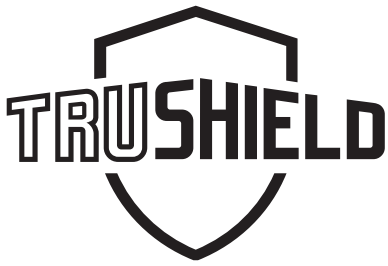

Installation Instructions
Cloak Sides and Rear
Part#J126501, J126502, J126503

Care+ Maintenance

- DO NOT store top while wet. Allow to dry completely before storing.
- Use only a high quality automotive soap, warm water and soft brush.
- DO NOT aggressively scrub mesh material. Removal of protective PVC coating may occur.
- If cords become damaged discontinue use immediately and replace cord.
- For added UV protection and shine use a PVC safe protectant.
- DO NOT use any cleaner or protectant that requires buffing or uses fillers or silicon.

Compatible with Cloak
top. Tops available for:
J126500 (97-06 TJ)
J126522 (07-18 JK 2 Door)
J126523 (07-18 JK 4 Door)





Installation Instructions
Cloak Sides and Rear
Part#J126501, J126502, J126503

Suggested Cord length location

