


## Installation Instructions Outback Wind Breaker Part # J126530

07-11 JK (2-Door)

Note: Please read instruction entirely before installing this product.

- **Step 1:** Depending on what your vehicle is equipped with remove your hardtop or lower your soft top. This part can be installed with the soft top lowered back, but if you plan to install this part in conjunction with a Tonneau cover the soft top and bow assembly will need to be completely removed. It is also recommended for safety reasons to remove the bow assembly pivot brackets from the roll bar using a #30 torx bit.
- **Step 2:** Position the Windbreaker between your sport bar with the zippered flap on towards the back. Fasten the windbreaker by running the strap around the sport bar and through the buckle. (Fig A) Start with the top two center straps. (Fig B) Do not tighten completely at this time.

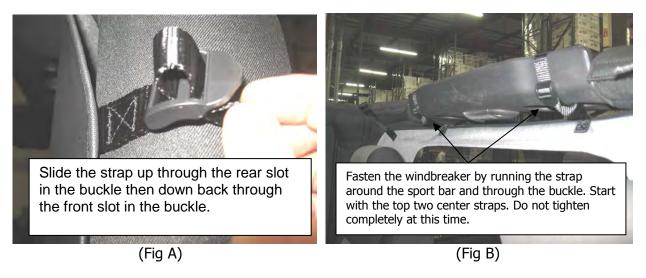

- **Step 3:** Now secure the two straps on each side and one on each top corner of the windbreaker. (Fig C, D)
- **Step 4:** Secure the bottom four straps (2 per side) loosely around the back of the vehicles front seat risers. (Fig E,F)
- **Step 5:** Position the windbreaker so it's in the optimal centered location and then proceed to tighten all of the straps and buckles. Installation is now complete.
- **Note:** The zipper on the back of the windbreaker underneath the flap to attach the Smittybilt Tonneau cover.




## Installation Instructions Outback Wind Breaker Part # J126530 07-11 JK (2-Door)



(Fig C)

(Fig D)

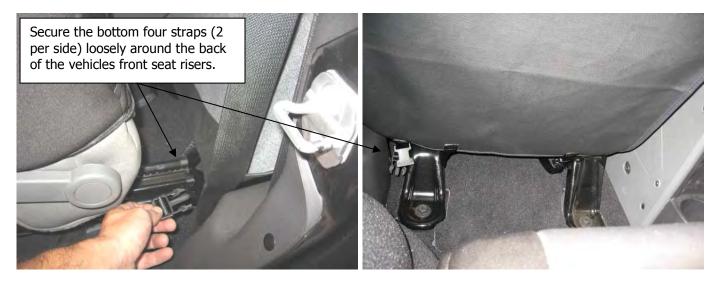

(Fig E)

(Fig F)



Installation Instructions Outback Wind Breaker Part # J123530 07-11 JK (2-Door)



(Before)

(After)

## CARE AND MAINTENANCE

Wash top with warm water and non abrasive soap. Do not wipe the windows with a dry rag or towel, use a clean water soaked sponge of soft cloth. The zippers should be lubricated to keep them running smoothly.