


REDROCK^{4X4}

Stubby Front Bumper 07-18 JK



Remove the (6) plastic push pins securing the factory splash shield to the vehicle. (4) Across the front edge, (2) on the rear edge.

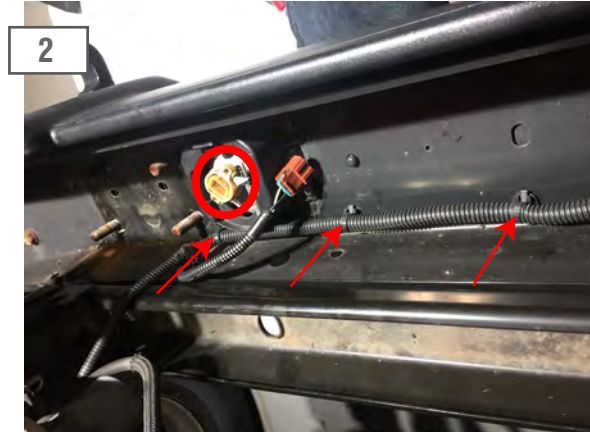


From under the vehicle, remove the factory fog light connectors and free the fog light wiring loom from the bumper.



From under the vehicle, access and remove the (8) 18mm nuts securing the factory bumper to the vehicle.



From under the vehicle, access and remove the (8) 18mm nuts, and (4) 18mm bolts securing the factory bumper to the vehicle. Then fully remove the bumper from the vehicle.

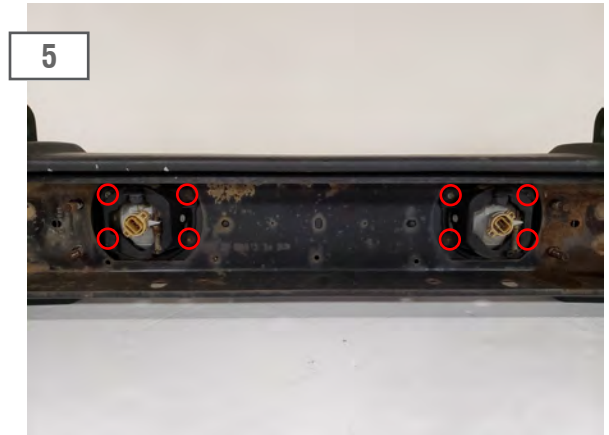

Remove the (8) 7mm screws securing the foglights to the factory front bumper.



6

Install the factory foglights to the new bumper using the (4) M4 x 15mm screws, flat washers, lock washers, and nuts.



8

Install the optional lightbar mount, or the (2) block off plates to the bumper by using the (6) M10 x 30mm bolts, (12) M10 flat washers, (6) M10 lock washers, and (6) M10 nuts.



7

Install the bumper to the frame of the vehicle using (4) M10 bolts, (8) flat washers, (8) lock washers, and (4) nuts. Torque to 40 ft-lbs.



9

Install the D-Ring brackets to the bumper. Plug the factory foglight harness into the foglights. Installation is complete.

Contents:

- (1) Bumper
- (1) Light Bar Mount
- (2) Block Off Plates
- (2) D-Rings
- (6) M10 x 1.5 x 30mm Bolts
- (4) M10 x 1.5 x 25mm Bolts
- (14) M10 Lock Washers
- (20) M10 Flat Washers
- (10) M10 Nuts
- (8) M4 x 0.7 x 15mm Screws

Tools Required:

- Ratchet
- Socket Set
- Torque Wrench
- Allen Wrench
- Trim Panel Removal Tool