

**Tools Needed:** Panel Removal Tool  
Flat Head Screw Driver  
T15 Torx Bit

**Contents:** (2) Headlights  
(2) Anti-Flicker Harnesses



**Step 1:** Using a panel removal tool, remove the (6) push clips holding the grille cover to the vehicle. Unplug the turn signals and remove the grille cover from the vehicle.




**Step 2:** Using a T15 Torx bit, remove the (4) torx screws securing the headlight to the vehicle.



**Step 3:** Slide the red retaining clip away from the plug. Then disconnect the plug from the headlight.



**Step 4:** Connect the adapter harness to the anti-flicker harness as shown.

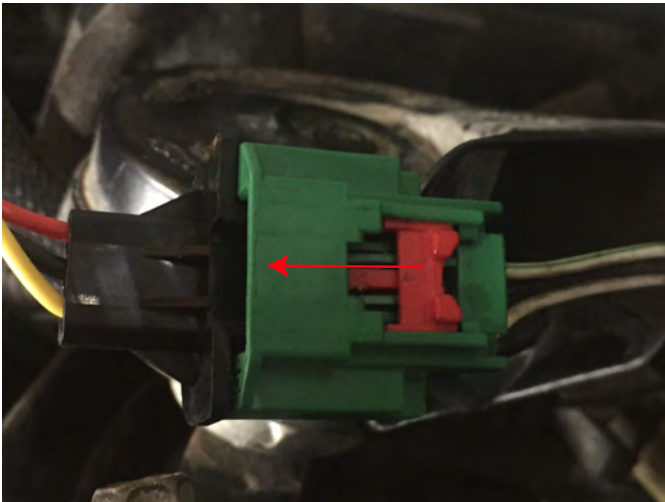

**Step 5:**

Connect the LED headlight harness to the vehicle. **\*\*Note:** The factory headlight plug clip is prone to breaking. Ensure you have a solid connection. If you can not push in the locking tab, you must use a zip-tie to ensure the plugs stay connected. Test the lights prior to reinstall the grille.



**Step 6:**

Headlight Adjustment: Using a T15 torx bit, turn the adjuster clockwise to adjust the light up. Turn the adjuster counter-clockwise to adjust the light down.



**Step 7:**

Reinstall the grille in reverse order.