


Installation Instructions for LED Replacement Fog Lights (2010 - 2018 JK)

Contents:
(2) Fog Lights


Tools Required:
Ratchet
8mm Socket

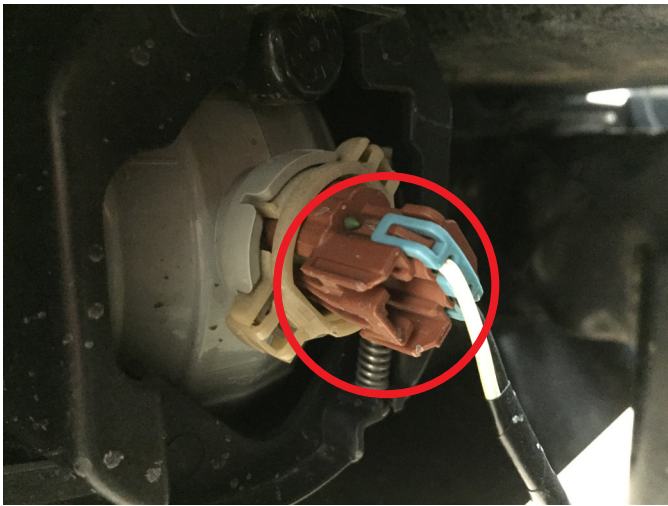

Step 1
Access the connectors on the rear of the fog lights from the wheel well, and remove.



Step 2
Locate the (4) factory screws, and remove. ****Note:** Factory hardware will be reused.

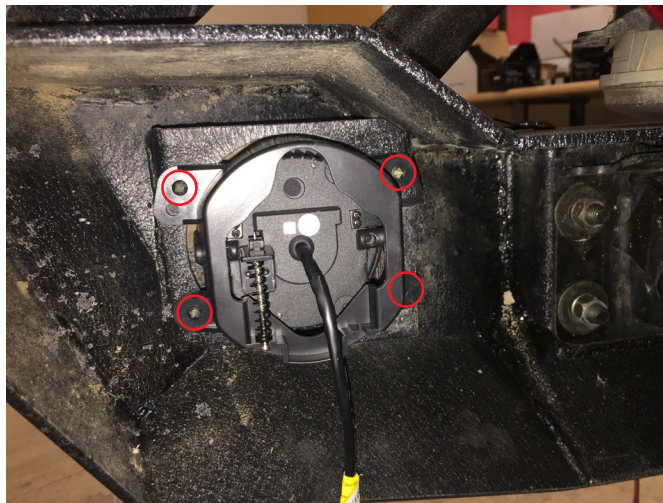

Step 3
Install the new LED fog lights using the factory hardware. Connect the plug to the factory connection.

