

Rugged Ridge – XHD Modular Bumper Hoop Installation

Part # 11540.14

Installation Difficulty: Easy

Installation Duration: 5 Minutes

Tools Needed:

- 13mm wrench

BEFORE



Part One: Install Hoop to Bumper


Step One: Align the Hoop onto the Bumper

Place the hoop onto the bumper, aligning the holes in the hoop base plate with the holes in the XHD bumper. The hoop can be installed either leaning forward (away from the grill), or backwards (towards the grill).



Step Two: Secure Hoop to Bumper

Using the supplied washers/bolts, place a washer on each bolt, and slide the bolts through the hoop base plate and into the bumper. Tighten with a 13mm socket. Slowly tighten being sure to alternate between the bolts.

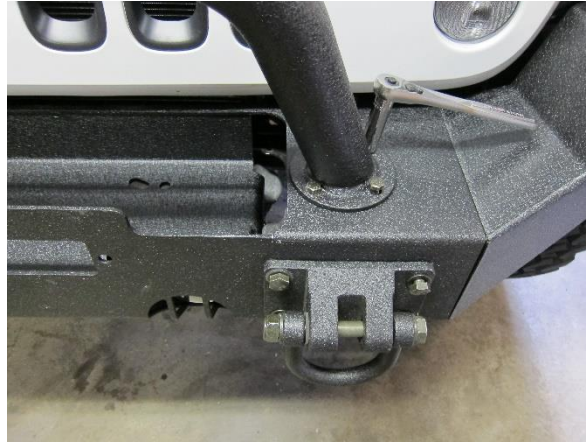

AFTER

