



Cowl Mounted LED Off Road Lights W/ Bracket 2018+ JL Wrangler

Tools Required:

- 5MM Allen Wrench
- T40 Torx Bit

Light Bar Contents:

- (1) 50" Light Bar

Light Bar Mounting Hardware:

- (2) M6x1.00 11mm Stainless Steel Bolts
- (2) M6 Lock Washers
- (2) M6 Flat Washers

Cowl Light Bar Bracket Hardware:

- (1) Set of Brackets (2 total pieces)
- (4) 11mm Coated Spacers
- (4) M6x1.00 50mm Stainless Steel Bolts
- (4) M6 Metal/Rubber Washers



Step 1:

Locate and remove the factory T40 hardware.
**Note: The hardware will not be reused.




Step 2:

Place the spacers on the cowl between the paint and the light bracket before loosely installing the provided M6 washer and bolt.



Step 3:

Connect the light bar to the brackets using supplied M6 hardware (flat washer, lock washer, and bolt). Once positioned, tighten all hardware.

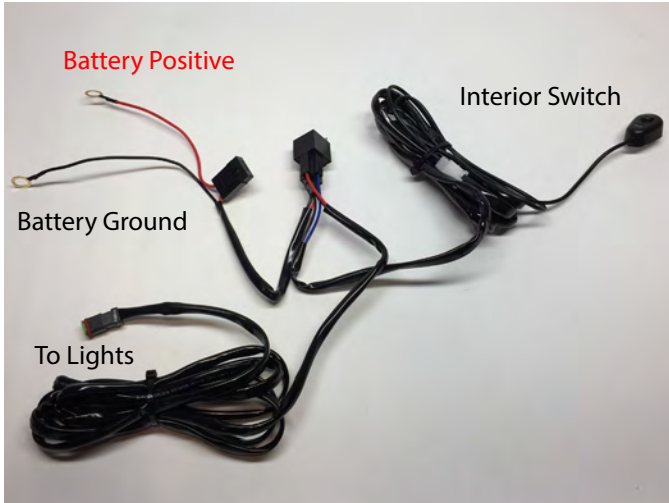

Step 4:

Run the LED wiring to the light bar. Connect the red eyelet to the positive battery terminal, and the black eyelet to the negative terminal. Run the on/off switch to the passenger compartment using a suitable body grommet or by drilling your own hole. Zip tie the excess wire away from heat and moving parts.