



KEY TO COMPONENTS	TOOLS NEEDED
A. 2 ea. Door	10mm socket
B. 2 ea. Mirror	13mm socket
C. 16 ea. M6x1.0x20mm Button head bolt	Extension
D. 8 ea. M6x1.0 Hex head nut	5/32 allen wrench
E. 16 ea. M6 Flat washer	Ratchet
F. 8 ea. M6 Split washer	

Old GloryDoors w/Mirrors  
Installation Instructions  
PART NUMBER J130908  
FITS Jeep Wrangler TJ  
97-06

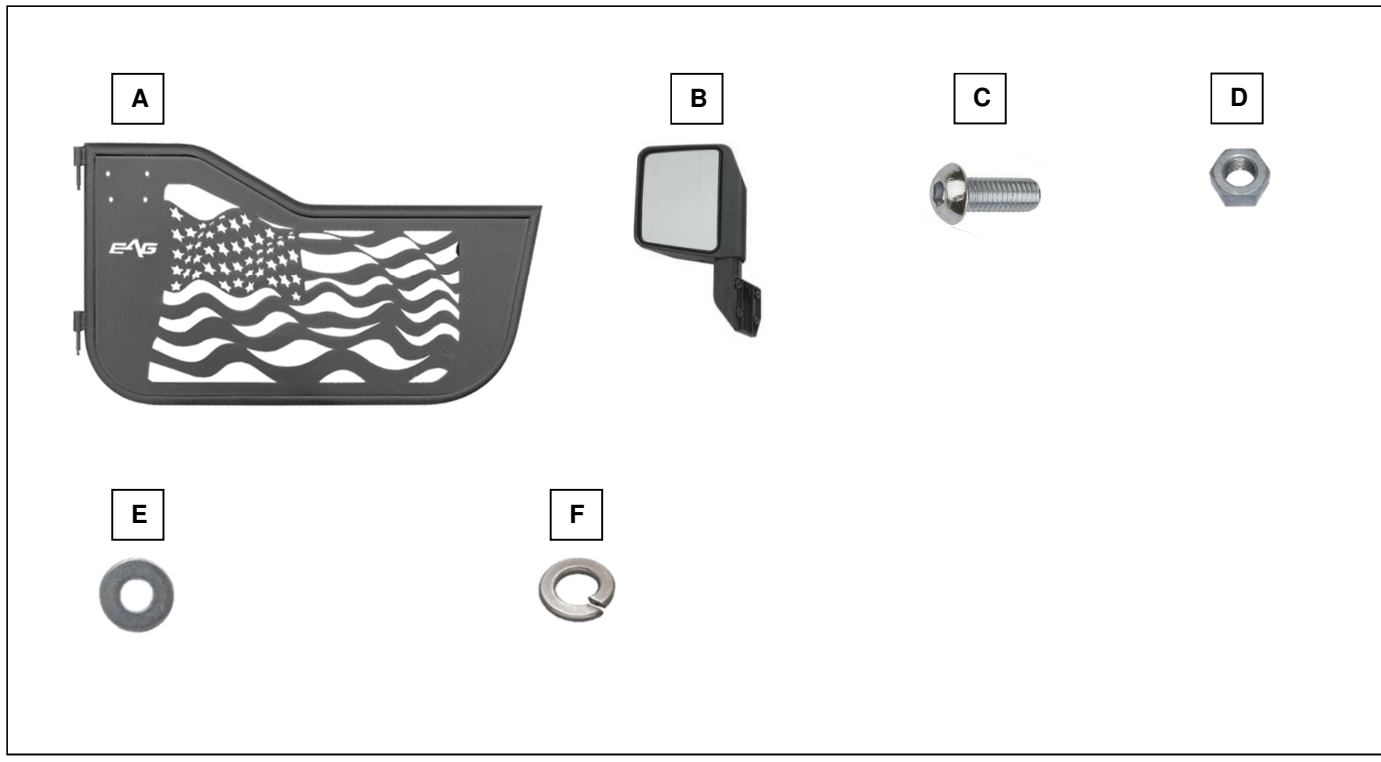

 Please take a few minutes to read and thoroughly familiarize yourself with the installation procedures outlined in this manual. Following the steps as outlined will save you time and help reduce mistakes. Once the instructions are reviewed, if you feel that you are not capable of safely installing the parts seek the help of a qualified installation expert to help you complete the job. The manufacture is in no way responsible for any personal injury or vehicle damage that may occur during the installation.

**California Proposition 65 Warning!**  
This product may contain lead a chemical known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).

## REMOVING FACTORY DOOR



Step 1.  
Using a 13mm socket locate and remove 1 factory nut attached to the bottom of the hinge on the door. Set hardware aside for later use.



Step 2.  
Lift off the door stopper strap.

## INSTALLING NEW DOORS



Step 3.  
Lift the door off the hinges. Set factory door aside in a protected area. Repeat step 1-3 for other side of vehicle.



Step 1.  
Locate and place supplied door (A) onto vehicle. Lower the door onto the factory hinges on the vehicle. Reinstall factory nuts onto the door hinges. Tighten down all hardware using a 13mm socket.


## INSTALLING NEW DOORS continued



Step 2.  
Attach the new door stopper strap onto vehicle.




Step 3.  
Locate and place supplied mirror (B) onto supplied door. Line up the holes in the mirror with the holes in the door.

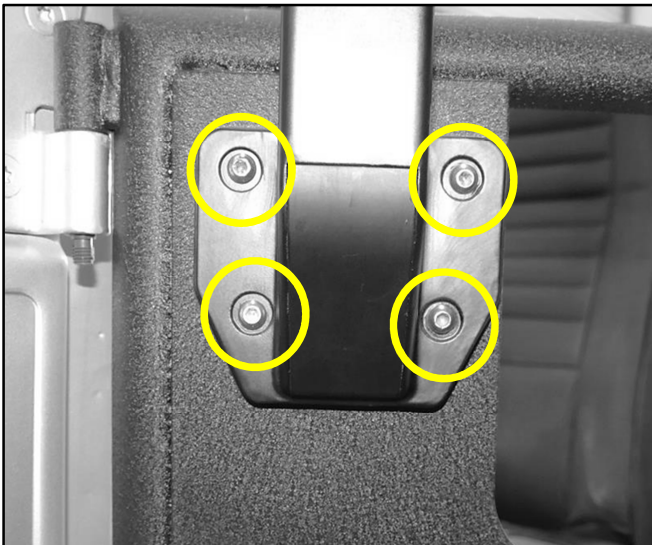


Step 4.  
Place a supplied M6x1.0x20mm button head bolt (C) with supplied M6 flat washer (E) through the hole in the mirror and through the hole in the door. Place a supplied M6 flat washer and a supplied M6 split washer (F) at the end of bolt. Start a supplied M6x1.0 hex head nut at the end of bolt. Repeat step for remaining bolts. Once all bolts are installed tighten down all bolts using a 10mm socket. Repeat step 1-4 for other side of vehicle.

## ADJUSTING NEW DOOR

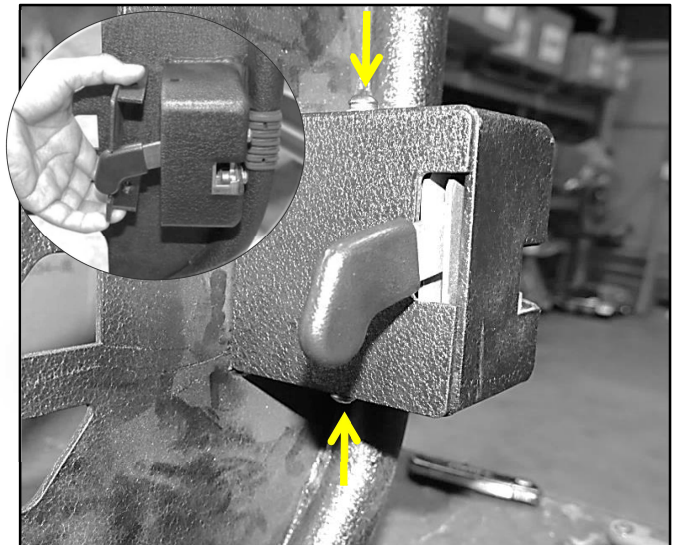


Step 1.  
Using a 5/32 allen wrench locate and remove 2 allen head bolt holding the plate onto supplied door. Set plate and hardware aside for reinstallation.

**ADJUSTING NEW DOOR continued**

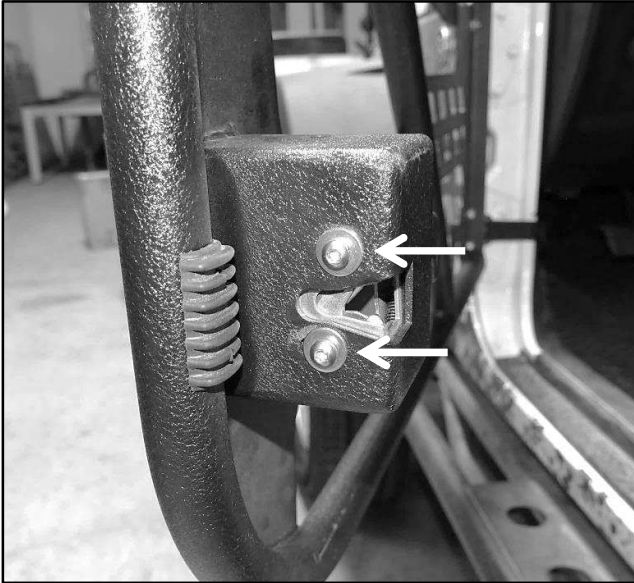

Step 2.  
Using a 5/32 allen wrench loosen up two allen head bolts holding the door latch onto door.

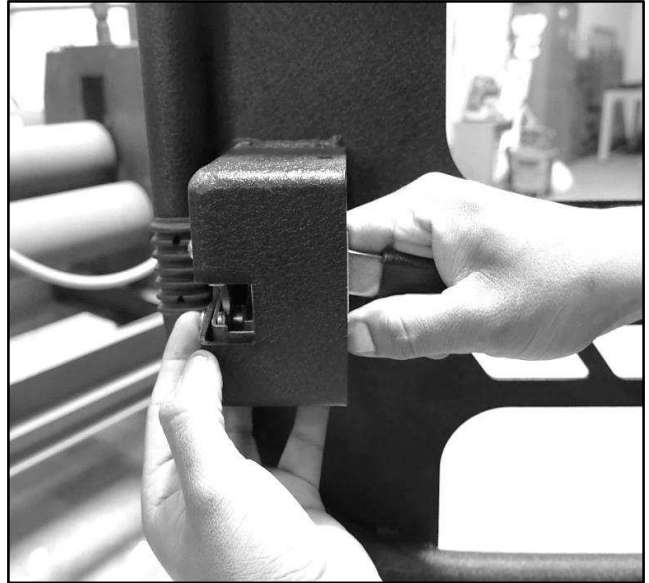

Step 3.  
Grab door latch handle and begin to adjust the door latch (this might take a few tries). Tighten down all bolts. Close the door to make sure there is no rattling. Reinstall plate by reversing step 1. Repeat step for other side door.



This completes the installation process.