


#### KEY TO COMPONENTS

- A. 2 ea. Mounting bracket
- B. 2 ea. U brackets
- C. 2 ea. Wing nuts
- D. 1 ea. Velcro strap
- E. 2 ea. M10x1.0x40mm button head bolt
- F. 4 ea. M8x1.25x30mm button head bolt
- G. 4 ea. M8 flat washer
- H. 4 ea. M8 split washer
- I. 2 ea. M10 flat washer
- J. 2 ea. M10 split washer

#### TOOLS NEEDED

T-50 torx bit  
T-30 torx bit  
10mm socket  
#2 Philip's head  
screw driver

## Hi-Lift Jack Door Hinge Mounting Brackets Installation Instructions PART NUMBER J130914 FITS Jeep Wrangler JK 07-17

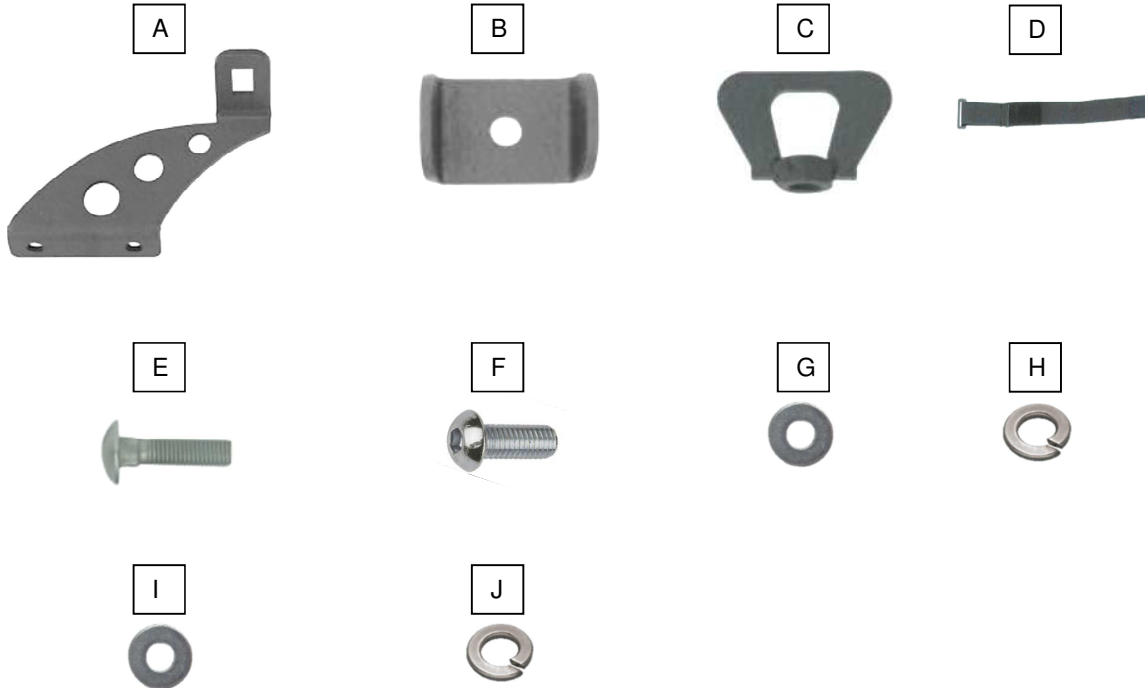


Please take a few minutes to read and thoroughly familiarize yourself with the installation procedures outlined in this manual. Following the steps as outlined will save you time and help reduce mistakes. Once the instructions are reviewed, if you feel that you are not capable of safely installing the parts seek the help of a qualified installation expert to help you complete the job. The manufacture is in no way responsible for any personal injury or vehicle damage that may occur during the installation.

#### California Proposition 65 Warning!

This product may contain lead a chemical known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).

## INSTALLING BRACKET ON HOOD HINGE

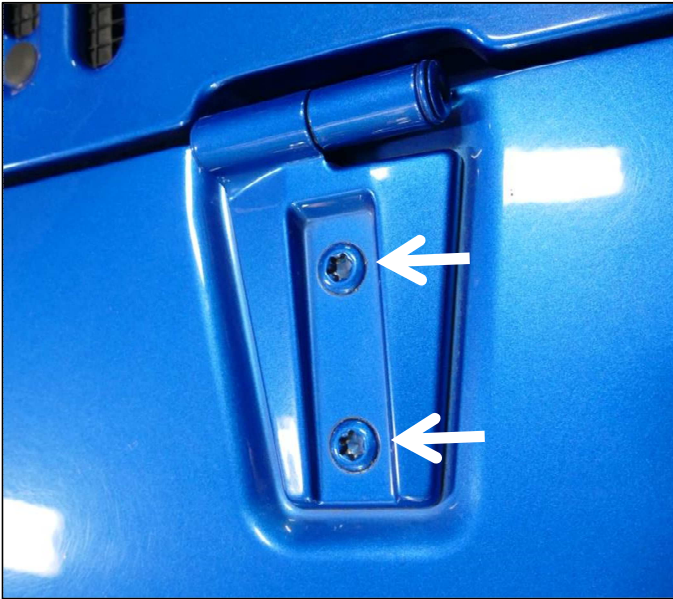

Step 1.  
Using a T-50 torx bit locate and remove two factory bolts on the hood. Discard factory hardware.



Step 2.  
Place supplied mounting bracket (A) onto Jeep. Line up the bracket holes with the holes in the hood hinge holes.



Step 3.  
Place a supplied M8x1.25x30mm button head bolt with supplied M8 flat washer (G) and supplied M8 split washer (H) through the hole in the bracket through the hole in the hood hinge onto factory hood. Repeat step for remaining bolt. Once all hardware is installed tighten down all hardware. Repeat step 1-3 for remaining bracket.

## INSTALLING BRACKET ON DOOR HINGE



Step 1.  
Using a T-50 torx bit locate and remove two factory bolts on the door hinge. Discard factory hardware.



## INSTALLING BRACKET DOOR HINGE continued



Step 1.  
Place supplied mounting bracket (A) onto Jeep. Line up the bracket holes with the holes in the door hinge holes.



Step 2.  
Place a supplied M8x1.25x30mm button head bolt (F) with supplied M8 flat washer (G) and supplied M8 split washer (H) through the hole in the bracket through the hole in the door hinge onto factory hood. Repeat step for remaining bolt. Once all hardware is installed tighten down all hardware. Repeat step 1-3 for remaining bracket.



This completes the installation.