

07-18 JK Aluminum Grab Handles Install Guide

Contents:

- (2) Grab Handles
- (2) M8x1.25 75mm Hex Head Bolts
- (2) M8x1.25 100mm Hex Head Bolts
- (2) 45mm Spacers
- (2) 65mm Spacers

Tools Required:

- 13mm Socket
- 6mm Allen Key/Socket
- Ratchet




// Step 1.
Remove the (2) 13mm bolts per side along the A-Pillar [A].



//Step 2.
Begin by loosely installing (1) M8x1.25 75mm bolt and 45mm spacer into the vehicle per side [B]. The spacer fits in between the grab handle and the A-Pillar panel.



//Step 4.
Firmly tighten both bolts per side using a 6mm allen key/socket, installation is now complete [D].

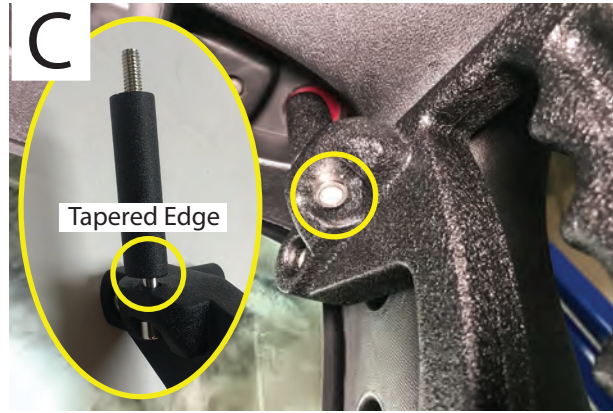

//Step 3.
Install the (1) M8x1.25 100mm bolt with the (1) 65mm spacer per side [C]. The spacer goes in between the grab handle and the A-Pillar panel.

****Note:** The tapered edge of the 65mm spacer goes towards the grab handle.