

# 87-06 Wrangler Farm Jack Hood Mount Installation Guide

## Contents:

- (2) Hood Mounts
- (12) M8x1.25 30mm Bolts
- (12) M8 Washers
- (2) M12x1.75 40mm Bolts
- (2) M12x1.75 Wing Nuts
- (2) M12x1.75 Lock Nuts

## Tools Required:

- 19mm wrench/socket
- T40 Torx socket
- 6mm Allen key/socket



### //Step 2:

Using provided (3) M8x1.25 30mm bolts and washers, install mounting brackets above the hood hinges for both sides using a 6mm allen key.




### //Step 4:

Install the farm jack onto the lock nut previously installed. Once jack is onto the bolt, install the (2) M12x1.75 Wing Nuts to hold the jack to the mount. Installation is now complete.



### // Step 1:

Remove the (3) T40 Torx bolts from the hood hinge.

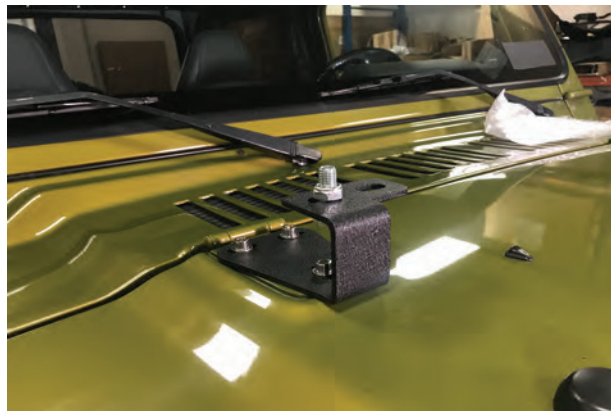

### //Step 3:

Once mounts are secured, install the (2) M12x1.75 30mm bolts through the bottom of the bracket with (2) M12x1.75 Locking Nuts per side.



**\*\*Farm jack is not included\*\***