

Spare Tire Delete (18+ JL)

Contents:

- (1) Spare Tire Delete
- (1) Rubber Grommet


TOOLS REQUIRED:

- 13mm Sockets
- Ratchet
- T40 Torx Bit
- Trim Panel Removal Tool
- Clean Towel
- Cleaning Solution



STEP 1 //

Locate the T40 torx lock screw on the camera cover, and turn it counter clockwise to unlock. Remove the camera cover by pulling away from the vehicle.

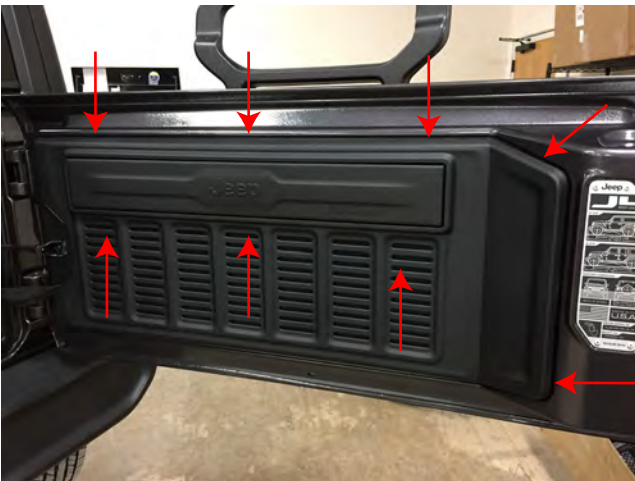

STEP 2 //

Using a trim panel removal tool, carefully pry the plastic tailgate cover off. Remove cover.



STEP 3 //

Locate, and unplug the (2) plug connections.




STEP 4 //

Carefully remove the wiring and grommet from the vehicle. Locate, and remove the (8) 13mm bolts holding the tire carrier secure. Remove tire carrier. ** Note factory hardware will be reused.



STEP 5 //

Using a clean towel and cleaning solution, clean the back tailgate where the spare tire was located.

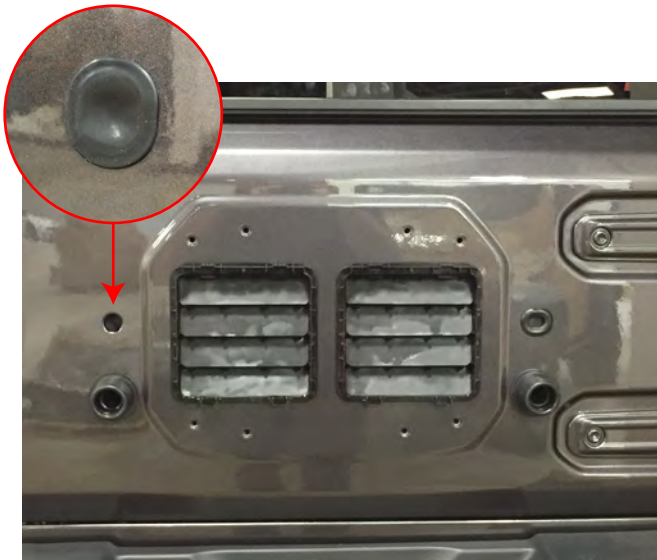

STEP 6 //

Insert the supplied (1) rubber grommet into the tailgate by simply pushing it into the vehicle.



STEP 7 //

Install the spare tire delete to the vehicle using the (8) 13mm factory bolts. Torque to 30 ft-lbs. Installation is complete.