

Cowl Body Armor 18+ Jeep Wrangler JL

Contents:

(1) - Cowl Body Armor

Tools Required:

- Soap & Water
- Clean Towel
- Isopropyl Alcohol

2




Familiarize yourself with how the cowl body armor fits prior to peeling off the tape backing. Then remove the tape backing and apply firm even pressure to ensure proper adhesion.

1



Wash the factory cowl area with soap and water. Allow the cowl panel time to dry. **Recommended: Wipe the mount down with isopropyl alcohol to ensure the cleanest surface possible.

3

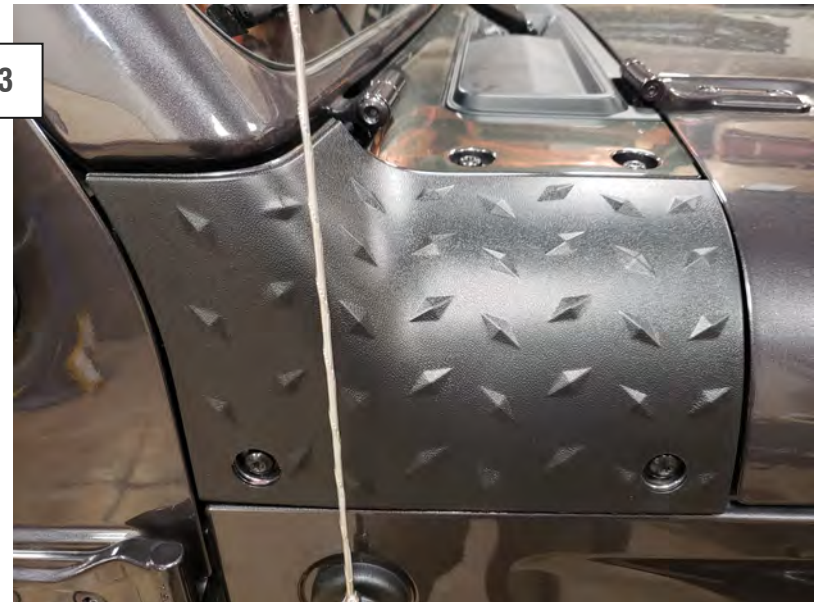

Installation is now complete.